

INPUT/OUTPUT MODULE (IO01)

Overview	5
Channel Assignments	6
IO Module Description	8
IO Module Orientation in the System	8
Logical Layout of an IO Module	9
Physical Layout of an IO Module	11
Options on the IO Module	14
DA Option	14
DB Option	14
DC Option	15
DD Option	15
DE Option	15
DR Option	16
DM Option	19
Options on the CPU Module	19
HA Option	19
HB and HC Options	19
Connectors on the IO Module	20
IO Module to CPU Module	20
IO Module to Bulkhead	20
Maintenance Connector	20
Channel Functions	21
LOSPX Channel	21
Maintenance Channel	21
Error Logger Channel	22
Support Channel	22
MCU	22
LOSP Channel	24
LOSP Protocol	27
LOSP Channel Instructions	28
I/O Commands	29

50-Mbyte/s MISP Protocol	31
Ready Signal	31
Data Lines 2 ⁰ through 2 ¹⁵	31
Parity Bits	31
Resume Signal	31
Disconnect Signal	32
Disconnecting Resume Signal	32
HISP Channel	32
HISP Input Sequence	33
HISP Output Sequence	38
HISP Errors	42
VHISP Channel	43
VHISP Instructions	43
VHISP Addressing	44
VHISP Input Sequence	44
VHISP Input Data Path	45
VHISP Output Sequence	47
VHISP Errors	49
I/O Data Path through the CP Module	50
I/O Write Path through the CP Module	50
I/O Read Path through the CP Module	50
I/O Logic on Shared Module	53
Acronyms	54
Shared Module Ports	54
Shared Module Options	56
SA Option	56
SB Option	56
SC Option	56
SD Option	56
Shared Command Codes	57
I/O Command Flow through Shared Module	58
I/O Sequence	61

Figures

Figure 1. IO Module Position within System	9
Figure 2. IO Module Logical Layout	10

Figures (continued)

Figure 3.	IO Module Construction	11
Figure 4.	IO Module Board 1	12
Figure 5.	IO Module Board 2	13
Figure 6.	MCU Channel Format	23
Figure 7.	LOSP 0 and 1 Input Control and Data	25
Figure 8.	LOSP 0 and 1 Output Control and Data	26
Figure 9.	HISP Input Sequence	35
Figure 10.	HISP 0 Input Data	36
Figure 11.	HISP 0 Input Control and Address	37
Figure 12.	HISP Output Sequence	39
Figure 13.	HISP 0 Output Control and Address	40
Figure 14.	HISP 0 Output Data	41
Figure 15.	VHISP Input Control Signals	45
Figure 16.	VHISP 0 Input Control and Data	46
Figure 17.	VHISP Output Control Signals	47
Figure 18.	VHISP 0 Output Control and Data	48
Figure 19.	CPU Options – Write (IO to Memory)	51
Figure 20.	CPU Options – Read (Memory to IO)	52
Figure 21.	Channel Request Information Flow	53
Figure 22.	Shared Module Port/Group Designation	55
Figure 23.	CPU-to-Shared Module Initial Data Flow	58
Figure 24.	SA Option Conflict Resolution	59
Figure 25.	Data Format for Shared Module-to-CPU Transfers .	60
Figure 26.	CPU 14 Requests Channel 105 from the Shared Module	61
Figure 27.	Shared Module Sends Request to the IO Module ...	62
Figure 28.	Channel 104 Sending Disk Request Packet to the IOS through CPU 3	62
Figure 29.	HISP Transfer from IOS to Mainframe	63
Figure 30.	LOSP Transfer from the IOS to Mainframe Memory	63
Figure 31.	CPU 7 is Interrupted	64
Figure 32.	Example System Configuration	66

Tables

Table 1.	I/O Channel Assignments (CRAY T932 System) ...	7
Table 2.	I/O Channel Assignments (CRAY T916 System) ...	7

Tables (continued)

Table 3.	I/O Channel Assignments (CRAY T94 System)	8
Table 4.	HISP and VHISP Data Buffer Option Assignments	16
Table 5.	LOSP Channel Data Buffer Option Assignments ..	18
Table 6.	LOSP Channel Instructions	29
Table 7.	DC Option I/O Command Packets	30
Table 8.	HISP Address and Block Length Options	33
Table 9.	HISP Errors	42
Table 10.	VHISP Instructions	43
Table 11.	VHISP Channel Errors	49
Table 12.	Shared Command Codes	57

Overview

The IO module provides an interface between the CPU and channels and the peripheral devices for the CRAY T90 series system. Each IO module supports the following channels:

- 8 low-speed (LOSP) channels
- 8 high-speed (HISP) channels
- 4 very high-speed (VHISP) channels
- 4 LOSPX channels

The term *LOSPX* refers to either the error logger channel, the maintenance channel, the support channel, or the maintenance control unit interrupt (MCU) channel. The quadrant position on the IO module determines the type of a given LOSPX channel. LOSPX channel assignments are as follows: quadrant 0 is the maintenance channel; quadrant 1 is the support channel; quadrant 2 is the error logger channel; and quadrant 3 is the MCU channel.

A fully configured CRAY T90 series system (a CRAY T932 system with four IO modules) can support the following channels:

- 32 LOSP
- 32 HISP
- 16 VHISP
- 16 LOSPX

A CRAY T916 system can support the following channels:

- 16 LOSP
- 16 HISP
- 8 VHISP
- 8 LOSPX

A CRAY T94 system can support the following channels:

- 8 LOSP
- 8 HISP
- 4 VHISP
- 4 LOSPX

Logical channel numbers are as follows:

- LO SP: 100 through 177
- HISP: 400 through 437
- VHISP: 20 through 37
- LO SPX support channel: 60 through 67

An IO module connects directly to a CPU module with electronic zero insertion force (EZIF) orthogonal interconnect module (OIM) connectors. OIMs connect modules that are on an orthogonal plane. Within a stack of 8 CPU modules (in a CRAY T916 or CRAY T932 system), CPUs 2, 3, 4, and 5 connect to the IO module. In a CRAY T94 system, CPUs 0, 1, 2, and 3 connect to the IO module.

External cabling begins at the IO module via I/O connectors. Cables within the CRAY T90 series system route through the chassis and connect to the bulkhead where external cable connections reside.

Any CPU can access any I/O channel. A direct connection does not always exist between the CPU making a request and the IO module receiving it; therefore, I/O commands are always sent to the local shared module first. If the local shared module cannot access the IO module, it sends the command to the remote shared module. The remote shared module sends the command to an I/O channel through the CPU module that lies between the shared module and the IO module.

Channel Assignments

Table 1 lists the channel assignments for the CRAY T932 system. The column labeled "Quadrant" refers to the four quadrants on the IO module. The column labeled "IO Module" refers to the physical position of the module within the system. Note that HISP channel numbers are for reference only because the CPU cannot issue a HISP instruction.

Table 2 provides similar information for the CRAY T916 system, and Table 3 provides information for CRAY T94 systems.

Table 1. I/O Channel Assignments (CRAY T932 System)

IO Module	CPU Physical Number	IO Module Quadrant	VHISP Number	LOSP Number	HISP Number	Support Channel Number
A	22	0	30	140/141,142/143	420, 421	64/65
	23	1	31	144/145,146/147	422, 423	
	24	2	32	150/151,152/153	424, 425	
	25	3	33	154/155,156/157	426, 427	
E †	12	3	24	120/121,122/123	410, 411	62/63
	13	2	25	124/125,126/127	412, 413	
	14	1	26	130/131,132/133	414, 415	
	15	0	27	134/135,136/137	416, 417	
I	2	0	20	100/101,102/103	400, 401	60/61
	3	1	21	104/105,106/107	402, 403	
	4	2	22	110/111,112/113	404, 405	
	5	3	23	114/115,116/117	406, 407	
M †	32	3	34	160/161,162/163	430, 431	66/67
	33	2	35	164/165,166/167	432, 433	
	34	1	36	170/171,172/173	434, 435	
	35	0	37	174/175,176/177	436, 437	

† This IO module is positioned upside down.

Table 2. I/O Channel Assignments (CRAY T916 System)

IO Module	CPU Physical Number	IO Module Quadrant	VHISP Number	LOSP Number	HISP Number	Support Channel Number
I	2	0	20	100/101,102/103	400, 401	60/61
	3	1	21	104/105,106/107	402, 403	
	4	2	22	110/111,112/113	404, 405	
	5	3	23	114/115,116/117	406, 407	
E †	12	3	24	120/121,122/123	410, 411	62/63
	13	2	25	124/125,126/127	412, 413	
	14	1	26	130/131,132/133	414, 415	
	15	0	27	134/135,136/137	416, 417	

† This IO module is positioned upside down.

Table 3. I/O Channel Assignments (CRAY T94 System)

IO Module	CPU Physical Number	IO Module Quadrant	VHISP Number	LOSP Number	HISP Number	Support Channel Number
A	0	0	20	100/101,102/103	400, 401	60/61
	1	1	21	104/105,106/107	402, 403	
	2	2	22	110/111,112/113	404, 405	
	3	3	23	114/115,116/117	406, 407	

IO Module Description

The following paragraphs describe the orientation of the IO module within the entire system as well as its logical and physical layout. The options and connectors on the IO module are also described.

IO Module Orientation in the System

Figure 1 shows the position of the IO modules within the system, which is divided into four quadrants: 0, 1, 2, and 3. An IO module can reside in any or all quadrants. The IO modules are designated 0 (quadrant 0), 1 (quadrant 1), 2 (quadrant 2), and 3 (quadrant 3).

Figure 1 illustrates a CRAY T932 system. The CRAY T916 system, which has only quadrants 0 and 1 populated, can contain two IO modules, and the CRAY T94 system contains only one.

In CRAY T916 systems, the CP modules in stack location F are inverted; board 2 is facing up, and board 1 is facing down. For this reason, the IO module in quadrant 1 (location E) is positioned upside down.

In CRAY T932 systems, the IO module is positioned upside down in quadrant 1 (location E) and quadrant 3 (location M). This is necessary because the CP modules in stack locations F and N are inverted.

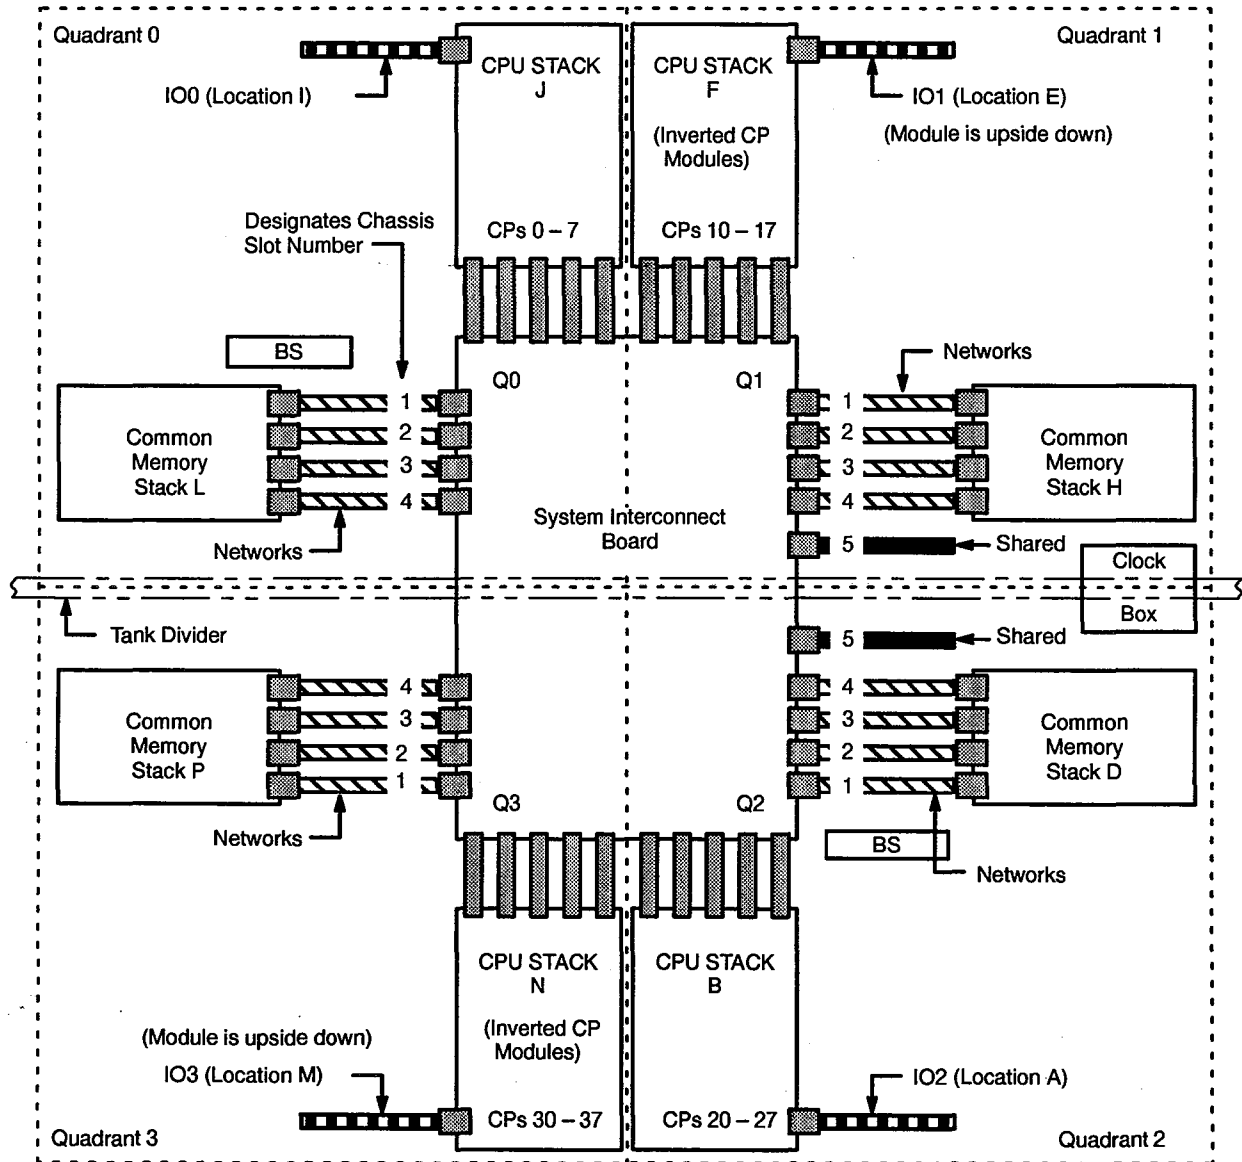


Figure 1. IO Module Position within System

Logical Layout of an IO Module

The IO module is divided into four logical groups or quadrants. Each quadrant on the module can handle transfers for the following channels:

- 2 LOSP channels
- 2 HISP channels
- 1 VHISP channel
- 1 LOSPX channel

Each quadrant is logically connected to one of the four CPUs that physically connect to the IO module.

Figure 2 shows the options and channel assignments per quadrant for the IO modules in a CRAY T916 or CRAY T932 system. Software channel numbering is based on the position of the module within the system.

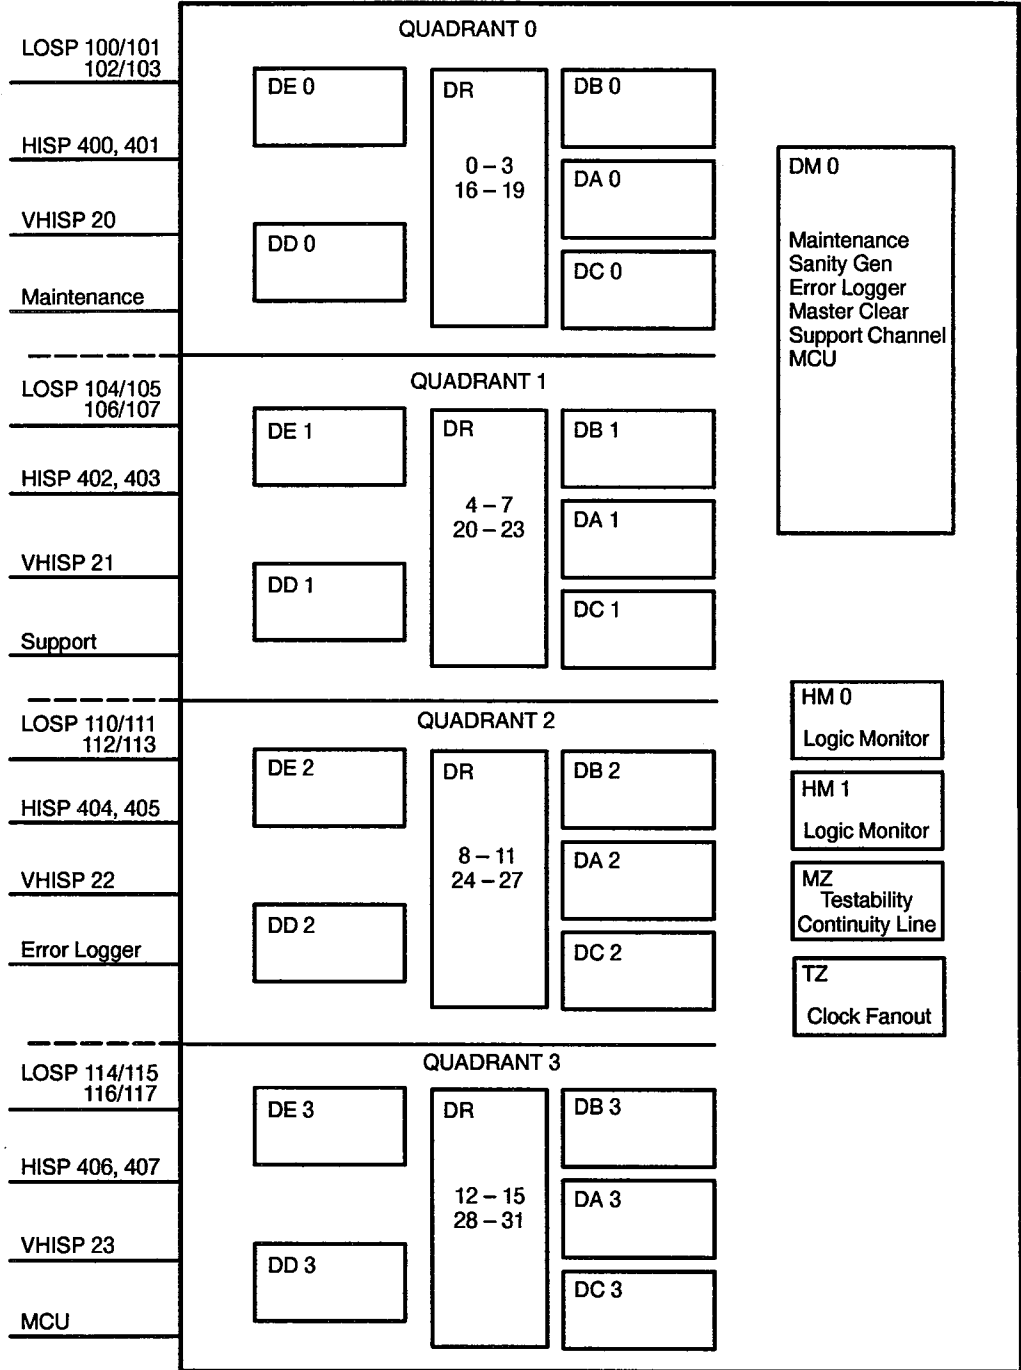


Figure 2. IO Module Logical Layout

Physical Layout of an IO Module

The IO module is a single assembly that consists of one 8-layer printed circuit board (A board) laminated between two 22-layer printed circuit boards (boards 1 and 2), as shown in Figure 3. Logic chips are mounted on boards 1 and 2.

Board 1	22 Layers
A Board	8 Layers
Board 2	22 Layers

Figure 3. IO Module Construction

Each IO module has 16 channel connectors, which are described later in this document. Terminators for VHISP, HISP, and LOSP control signals are also located on the module. Figure 4 is a diagram of the physical layout of board 1; Figure 5 shows board 2.

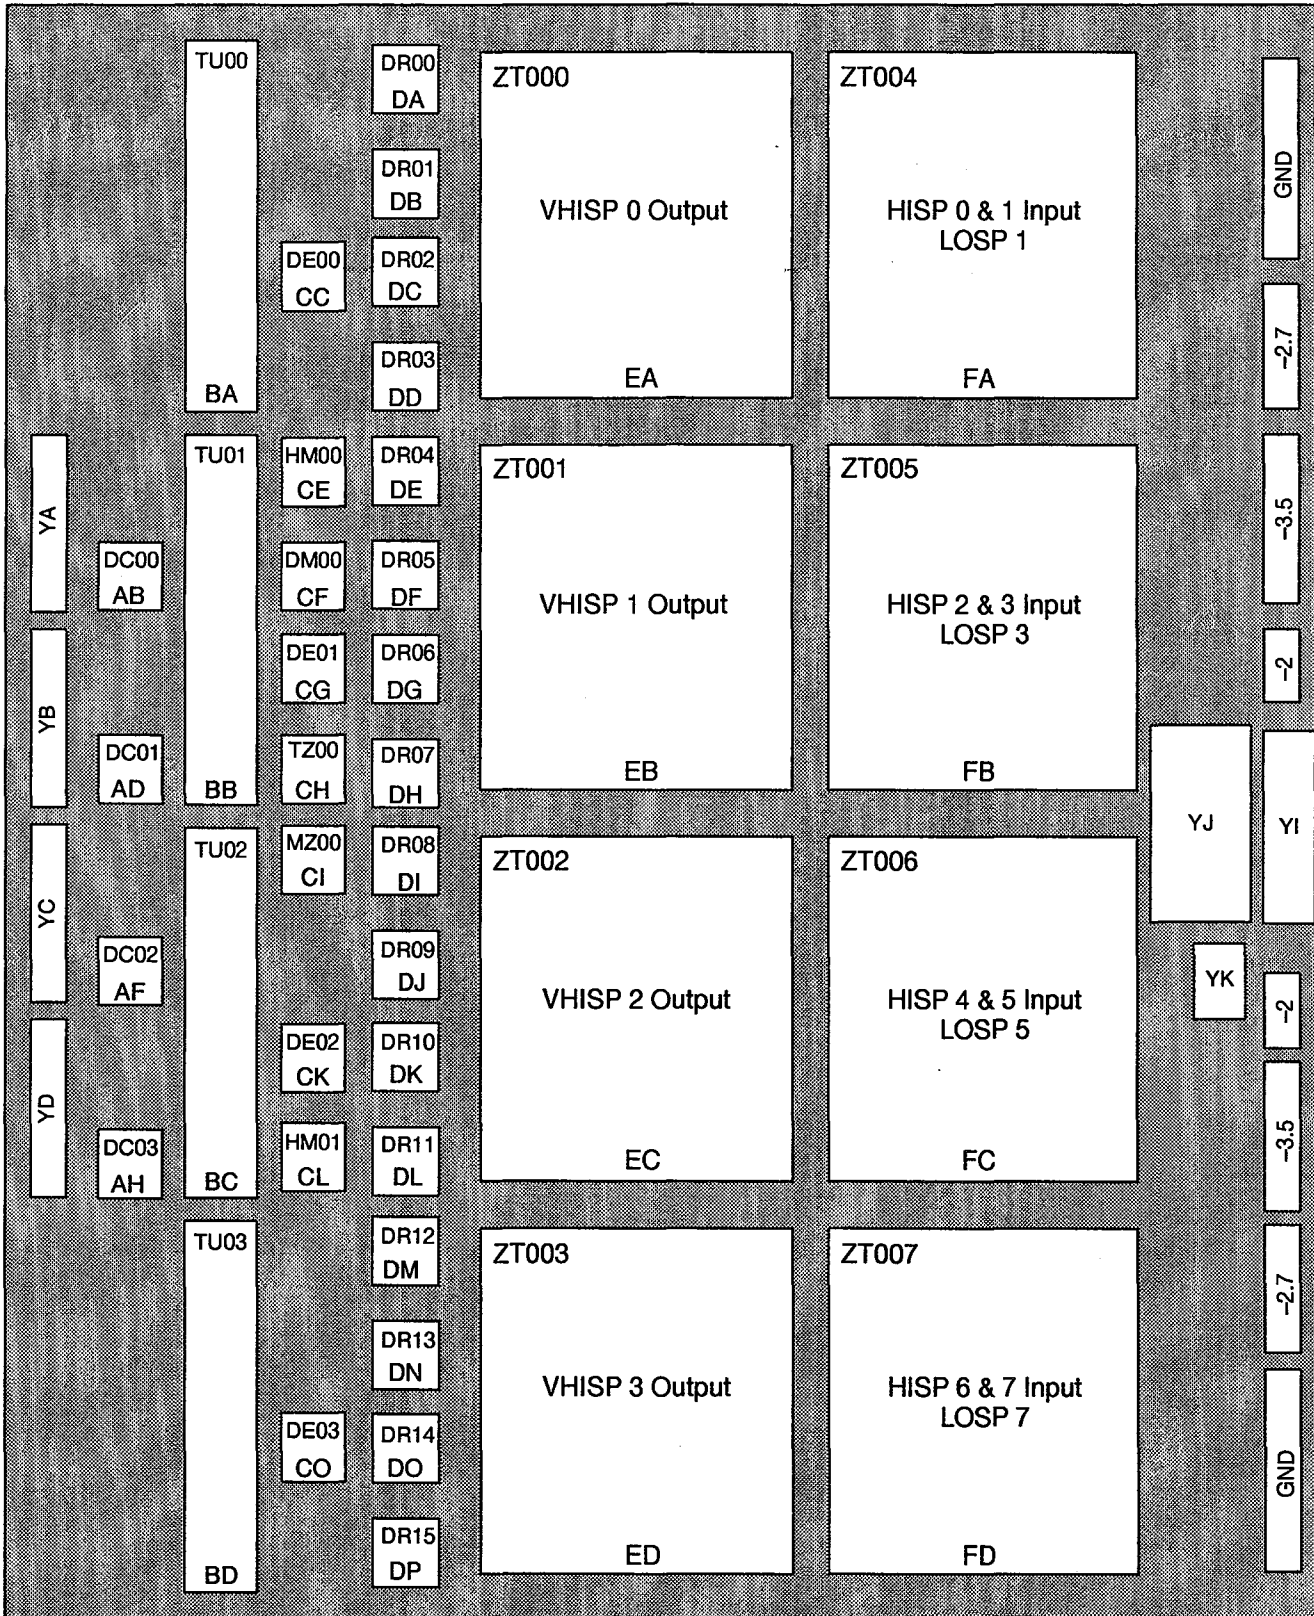


Figure 4. IO Module Board 1

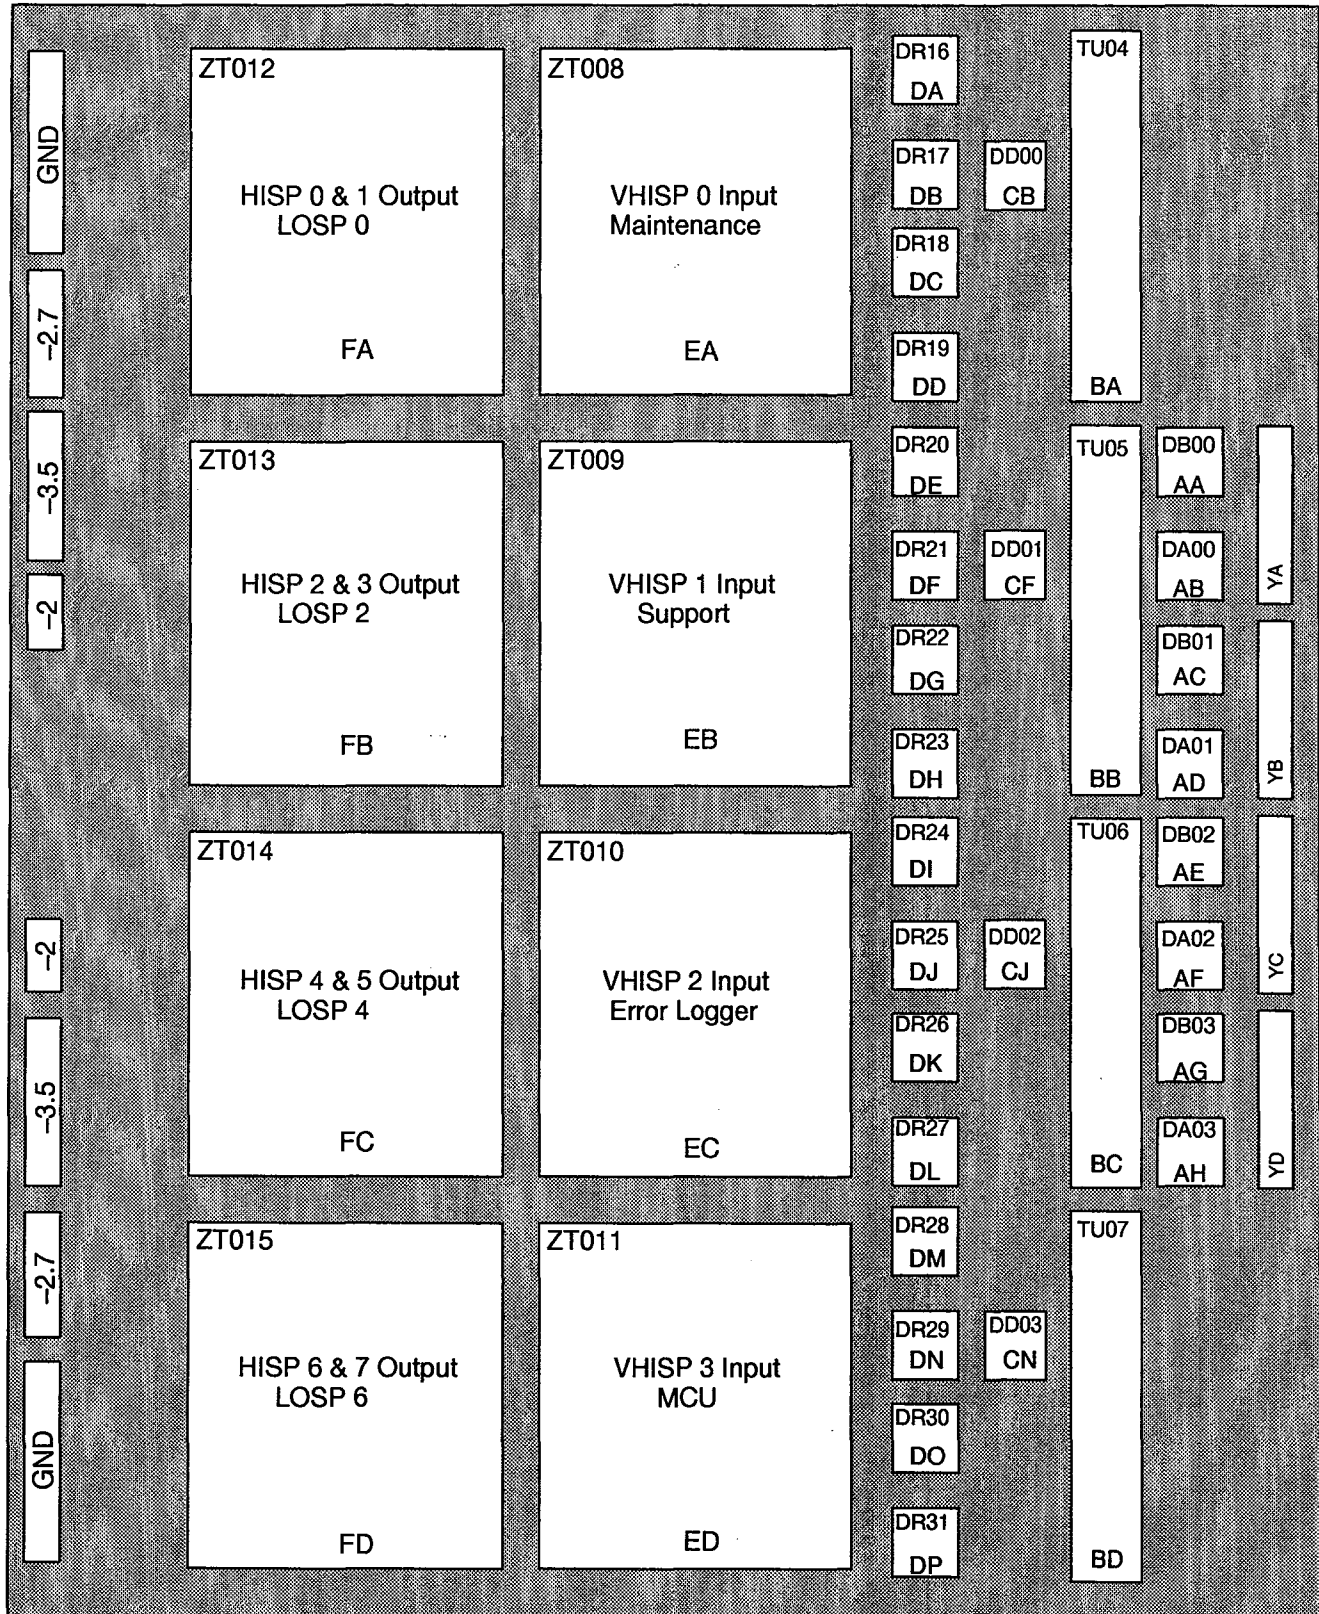


Figure 5. IO Module Board 2

Options on the IO Module

Each of the four logical quadrants contains the following options:

- DA option (1 each quadrant)
- DB option (1 each quadrant)
- DC option (1 each quadrant)
- DD option (1 each quadrant)
- DE option (1 each quadrant)
- DR option (8 each quadrant)
- DM option (1 per IO module)

DA Option

This option is one of two data interface options used to interface the CPU and I/O channels. An IO module contains four DA options. These options are labeled DA00, DA01, DA02, and DA03, which corresponds to the four quadrants of the module: 0, 1, 2, and 3.

During a read operation (memory to I/O), the DA option receives 32 data bits and 4 check bits of each memory word. This option handles only the odd data bits and odd check bits (the DC option handles the even bits). Data is then passed to the DR options of that quadrant, based on the channel transfer.

During a write operation (I/O to memory), the DA option passes 32 data bits (bits 00 through 15 and 32 through 47) and all 8 check bits to the CPU. The DA option receives data from the DR options in the quadrant.

The DA option also verifies SECDED on the data it passes for either the read or write operation. On a LOSP write operation, the DA option generates check bits before the data passes to the CPU.

DB Option

Four DB options reside on the IO module. The DB option is the interface between the CPU and the channel controller options (DD/DE) for the IO module. As with the DA and DC options, each quadrant of the IO module uses one DB option.

The DB option passes reference request information to the CPU for either a read or a write operation. The reference request packet contains a read/write bit, memory group, SECDED control, reference designator, block length, and address.

The DB option receives reference request, interrupt request, and 033 response information from the DD and DE options for all channel types (LOSP, HISP, and VHISP). The DB communicates with the DA, DC, and DR options to send data to and receive data from the CPU.

DC Option

Four DC options reside on the IO module. These options are labeled DC00, DC01, DC02, and DC03.

During a read operation (memory to IO), the DC option receives 32 data bits and 4 check bits of each memory word. This option handles only the even data and check bits.

During a write operation (IO to memory), the DC option passes 32 data bits (bits 16 through 31 and 48 through 63) to the CPU. The data is received from the DR options of the quadrant.

The DC option verifies SECDED on the data it passes for either the read or write operation, and it passes channel address information to the IO module on LOSP and VHISP transfers.

DD Option

The DD option is the channel control option for the following channels: HISP0 out, HISP1 out, LOSP0, and LOSPX. The DD option sends LOSP control signals to and receives HISP control signals from the external devices. Each IO module has four DD options, one in each quadrant.

The DD option contains the memory addressing registers for the channels indicated, including both current address registers and limit address registers. This option multiplexes its addresses and sends the resulting CPU address to the DB option.

The DD option sends LOSP, VHISP, and HISP control terms to and receives them from external devices.

DE Option

The DE option is the channel control option for the HISP 0 in, HISP 1 in, LOSP 1, and VHISP channels. The DE option contains the memory addressing registers for the channels indicated, including both current address registers and limit address registers. This option multiplexes its addresses and sends the resulting CPU address to the DB option.

The DE option sends LO SP, VHISP, and HISP control terms to and receives them from external devices.

DR Option

The DR option is the data buffer option between the channels and external devices. There are 32 DR options on the IO module. Each quadrant of the IO module contains 8 DR options. Refer again to Figure 2, the IO module logical layout block diagram, for the grouping of options per quadrant.

During a memory-to-I/O transfer, each DR option handles 18 bits (16 data bits and 2 check bits) received from the DA and DC options. During an I/O to memory transfer, each DR option sends 8 data bits and 1 check bit to the DA and DC options.

The DR option contains two data buffers for read data and two buffers for write data. Each buffer has four ranks. Each rank holds 16 words of data, 16 data bits and 2 check bits. These buffers can be circular; in other words, while one rank is being emptied, another rank can be filled.

The DR option receives memory addressing for the HISP channels. It also receives memory addressing and block length for the VHISP channels.

Table 4 describes the HISP and VHISP data buffer option assignments. Note that the bit assignments for the DR options on board 2 (DR16 – 31) are swapped with those on board 1. Table 5 describes the LO SP channel data buffer option assignments.

Table 4. HISP and VHISP Data Buffer Option Assignments

Channel	Option	Bits
HISP 0 input	DR000	0 – 3, 16 – 19, 32 – 35, 48 – 51, CB 0, 4
HISP 1 input	DR001	4 – 7, 20 – 23, 36 – 39, 52 – 55, CB 1, 5
	DR002	8 – 11, 24 – 27, 40 – 43, 56 – 59, CB 2, 6
VHISP 0 output	DR003	12 – 15, 28 – 31, 44 – 47, 60 – 63, CB 3, 7
HISP 0 output	DR016	16 – 19, 0 – 3, 48 – 51, 32 – 35, CB 4, 0
HISP 1 output	DR017	20 – 23, 4 – 7, 52 – 55, 36 – 39, CB 5, 1
	DR018	24 – 27, 8 – 11, 56 – 59, 40 – 43, CB 6, 2
VHISP 0 input	DR019	28 – 31, 12 – 15, 60 – 63, 44 – 47, CB 7, 3

Table 4. HISP and VHISP Data Buffer Option Assignments (continued)

Channel	Option	Bits
HISP 2 input	DR004	0 – 3, 16 – 19, 32 – 35, 48 – 51, CB 0, 4
HISP 3 input	DR005	4 – 7, 20 – 23, 36 – 39, 52 – 55, CB 1, 5
	DR006	8 – 11, 24 – 27, 40 – 43, 56 – 59, CB 2, 6
VHISP 1 output	DR007	12 – 15, 28 – 31, 44 – 47, 60 – 63, CB 3, 7
HISP 2 output	DR020	16 – 19, 0 – 3, 48 – 51, 32 – 35, CB 4, 0
HISP 3 output	DR021	20 – 23, 4 – 7, 52 – 55, 36 – 39, CB 5, 1
	DR022	24 – 27, 8 – 11, 56 – 59, 40 – 43, CB 6, 2
VHISP 1 input	DR023	28 – 31, 12 – 15, 60 – 63, 44 – 47, CB 7, 3
HISP 4 input	DR008	0 – 3, 16 – 19, 32 – 35, 48 – 51, CB 0, 4
HISP 5 input	DR009	4 – 7, 20 – 23, 36 – 39, 52 – 55, CB 1, 5
	DR010	8 – 11, 24 – 27, 40 – 43, 56 – 59, CB 2, 6
VHISP 2 output	DR011	12 – 15, 28 – 31, 44 – 47, 60 – 63, CB 3, 7
HISP 4 output	DR024	16 – 19, 0 – 3, 48 – 51, 32 – 35, CB 4, 0
HISP 5 output	DR025	20 – 23, 4 – 7, 52 – 55, 36 – 39, CB 5, 1
	DR026	24 – 27, 8 – 11, 56 – 59, 40 – 43, CB 6, 2
VHISP 2 input	DR027	28 – 31, 12 – 15, 60 – 63, 44 – 47, CB 7, 3
HISP 6 input	DR012	0 – 3, 16 – 19, 32 – 35, 48 – 51, CB 0, 4
HISP 7 input	DR013	4 – 7, 20 – 23, 36 – 39, 52 – 55, CB 1, 5
	DR014	8 – 11, 24 – 27, 40 – 43, 56 – 59, CB 2, 6
VHISP 3 output	DR015	12 – 15, 28 – 31, 44 – 47, 60 – 63, CB 3, 7
HISP 6 output	DR028	16 – 19, 0 – 3, 48 – 51, 32 – 35, CB 4, 0
HISP 7 output	DR029	20 – 23, 4 – 7, 52 – 55, 36 – 39, CB 5, 1
	DR030	24 – 27, 8 – 11, 56 – 59, 40 – 43, CB 6, 2
VHISP 3 input	DR031	28 – 31, 12 – 15, 60 – 63, 44 – 47, CB 7, 3

Table 5. LOSP Channel Data Buffer Option Assignments

Channel	Option	Bits
LOSP 0	DR016	0 – 3, parity 0
	DR017	4 – 7, parity 1
	DR018	8 – 11, parity 2
	DR019	12 – 15, parity 3
LOSP 1	DR000	0 – 3, parity 0
	DR001	4 – 7, parity 1
	DR002	8 – 11, parity 2
	DR003	12 – 15, parity 3
LOSP 2	DR020	0 – 3, parity 0
	DR021	4 – 7, parity 1
	DR022	8 – 11, parity 2
	DR023	12 – 15, parity 3
LOSP 3	DR004	0 – 3, parity 0
	DR005	4 – 7, parity 1
	DR006	8 – 11, parity 2
	DR007	12 – 15, parity 3
LOSP 4	DR024	0 – 3, parity 0
	DR025	4 – 7, parity 1
	DR026	8 – 11, parity 2
	DR027	12 – 15, parity 3
LOSP 5	DR008	0 – 3, parity 0
	DR009	4 – 7, parity 1
	DR010	8 – 11, parity 2
	DR011	12 – 15, parity 3
LOSP 6	DR028	0 – 3, parity 0
	DR029	4 – 7, parity 1
	DR030	8 – 11, parity 2
	DR031	12 – 15, parity 3
LOSP 7	DR012	0 – 3, parity 0
	DR013	4 – 7, parity 1
	DR014	8 – 11, parity 2
	DR015	12 – 15, parity 3

DM Option

The DM option distributes the maintenance channel and routes the error logger channel and support channel to available CPUs. The DM option also contains the sanity code generator. Each IO module has one DM option.

Options on the CPU Module

On the CPU module, the HA, HB, and HC option types perform I/O functions.

HA Option

Four HA options (HA0 through HA3) reside on each CPU module. The HA options contain the input and output data buffers for read and write references. HA0 and HA1 serve as the write data buffers, and HA2 and HA3 contain the read data buffers. The HA options also perform error correction. During a write operation, the HA options receive a 72-bit word from the HB and HC options, and they perform SECDED. The 8 check bits are then stripped off, and a new 12-bit checkbyte is generated for SBCDBD. The HA options then pass the data to the CH options, which steer the data to the CI options (the section drivers).

During a read operation, the HA2 and HA3 options receive 64-bit data words from the CJ options and generate the checkbytes. The HA options send 72-bit words to the HB and HC options in two transfers.

HB and HC Options

Each CPU has one HB option and one HC option. The HB option controls the interface to the IO module. During a memory write operation, the HB and HC options work in unison, each receiving 36 bits from the IO module.

During a read operation, the HB and HC options each receive data, in two 36-bit transfers, from two HA options. The HB option receives the odd bits; the HC option receives the even bits. The HB and HC options send the data to the IO module.

Connectors on the IO Module

The IO module uses three basic types of connections: the IO module-to-CPU module connection, the IO module-to-bulkhead connection, and the maintenance connection. The following paragraphs describe all three types of connections and their respective connectors.

IO Module to CPU Module

The IO module connects to the CPU modules through four OIM connectors. The IO module has four connection pads, which are labeled YA, YB, YC, and YD. Each connection pad connects to the YF pad of a CPU module. All CPU-I/O commands and I/O data pass through these connections.

IO Module to Bulkhead

The external channels physically connect to the IO module through an I/O connector harness. The I/O connector harness connects the IO module and the bulkhead. The connectors on the IO module side of the harness are sometimes referred to as *fuzz-button* connectors.

The IO module contains 16 I/O connectors: 8 on board 1 and 8 on board 2. There are five types of I/O connectors; each type has a unique part number. Types of connectors differ only in how they branch into the connections at the bulkhead. For example, one I/O connector may branch into ten 51-pin connectors, and another may branch into four 100-pin connectors. Refer again to Figure 4 and Figure 5 for more detailed information about the placement and characteristics of these connectors.

Each IO module is wired to one bulkhead. In a CRAY T932 system that has four IO modules, each module is wired to one of four bulkheads. External cabling starts from the bulkhead.

Maintenance Connector

The maintenance connector is located on the power regulator of the module. The maintenance connector is used to send and receive the following information to and from the module:

- Boundary scan signals – TCLK, TM, TDI, TDO, and RCLK
- OIM and SIM connector interlock signals
- Continuity line signals
- Thermal diode to output module temperature status

Channel Functions

This section describes the functions of all the I/O channels in CRAY T90 series systems. It includes information on each type of LOSPX channel, as well as a description of the LOSP, HISP, and VHISP channels.

LOSPX Channel

The term *LOSPX* refers to a maintenance channel, support channel, an error logger channel, or MCU channel. Each IO module supports up to four LOSPX channels. The quadrant position on the IO module indicates the type of LOSPX channel. The support channel can operate in either LOSP or mid-speed (MISP) mode. The following paragraphs describe the four types of LOSPX channels.

Maintenance Channel

The maintenance channel provides a channel for performing the following CRAY T90 series system functions:

- Configuring the system
- Master clearing CPUs
- Master clearing memory
- Initializing the system
- Enabling and disabling sections of the system
- Monitoring system activity
- Selecting test points
- Initializing I/O resources
- Sending and controlling sanity codes

Each half of a CRAY T932 system can have a separate and independent maintenance channel if the system is logically and physically divided into two separate systems. Not all the maintenance ports on the IO modules in a CRAY T932 system are used. If one of the maintenance ports fails, the maintenance channel can be recabled to a different IO module; however, this recabling changes the system configuration.

The maintenance channel originates as a standard 6-Mbyte/s LOSP channel that is routed from the support system VME chassis, through the I/O bulkhead, and then to a maintenance port interface on one of the IO modules.

Refer to the document entitled *Maintenance Channel* for more information.

Error Logger Channel

The error logger channel in CRAY T90 series systems uses a standard 6-Mbyte/s LOSP channel. The LOSP portion of the error logger channel runs from an FEI-3 board in the system support VME chassis to one of the I/O bulkheads. From an I/O bulkhead, the LOSP error logger channel runs through a boundary scan module (normal operation) to an IO module. From the IO module, the serial error logger channel connects to the rest of the modules in the system. For more information, refer to the document entitled *Error Logger Channel*.

Support Channel

Each IO module contains eight LOSP channels, which are connected to IOS clusters. The support channel is the ninth LOSP that originates from the OWS. It provides a Transmission Control Protocol/Internet Protocol (TCP/IP) connection for system calls and can operate in either LOSP or MISP mode.

The support channel enters the IO module on the DD1 option. From there, the data is sent serially to the DM option. The DM option sends the serial data to one of four DA/DC options; each DA/DC option corresponds to one physically connected CPU.

MCU

The MCU interrupt has the capability to interrupt any or all CPUs at once. The CRAY T90 series system can target the interrupt to any combination of the four possible partitions. All CPUs are capable of receiving MCU interrupt.

The MCU channel enters the IO module via the bulkhead. It originates from the HCM quarter board within the IOS. The DD3 option contains a 16-bit register that is loaded by the maintenance channel at configuration time. From the DD3 option, the data is sent serially to the DM option. The DM option directs the data to one of four DE options. The DE option reassembles the data into 16-bit packets (interrupt request packet) and sends it to the shared module via the attached CPU.

Figure 6 shows the bit assignments in the 16-bit register that is loaded from the maintenance channel. Bits 0 through 7 identify the CPU number, which can be either a physical or logical CPU number, as selected by bit 15. Bits 8 through 11 select the I/O group or groups that contain the CPUs to be interrupted. Bit 12 selects either a PINT or MCU interrupt. Currently, the PINT channel for real-time interrupts is not used.

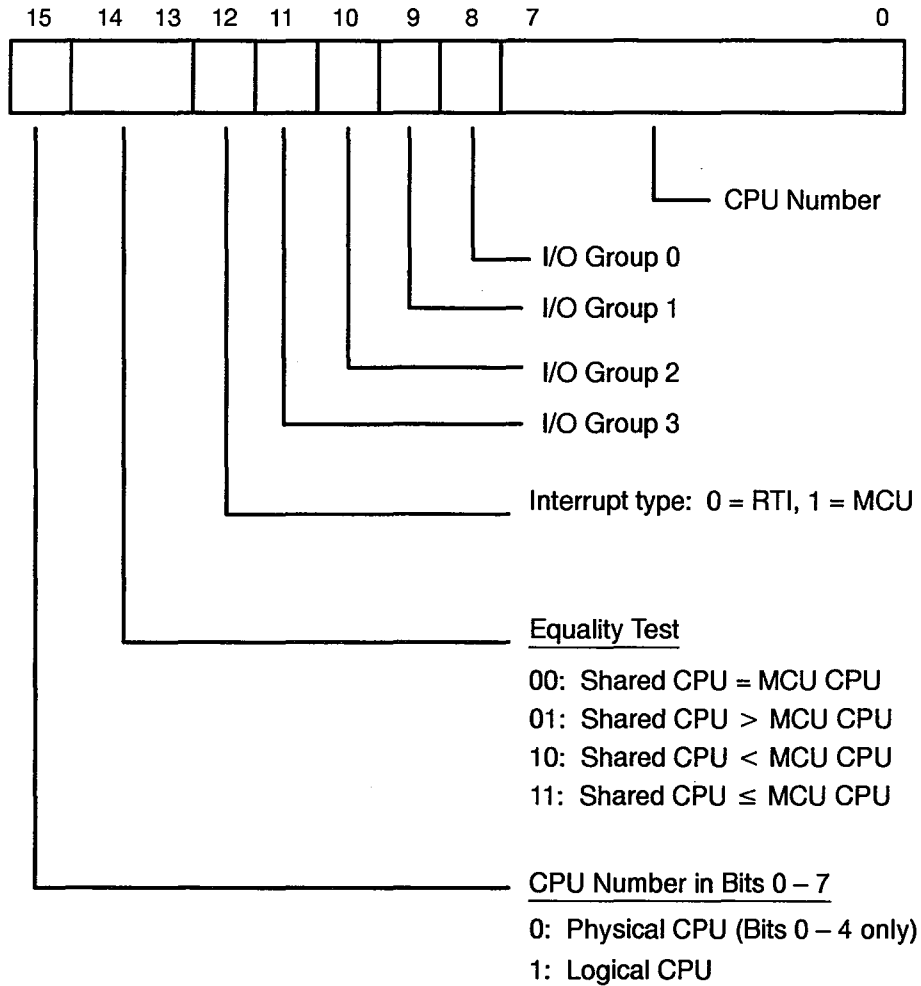


Figure 6. MCU Channel Format

The equality test bits determine exactly which CPUs are interrupted. For example, bits 0 through 7 and bit 15 select physical CPU 5. If the equality test bits are 00, then physical CPU 5 gets the interrupt. If the equality test bits are 01, all CPUs numbered 6 and greater get the interrupt. If the equality test bits are 10, all CPUs numbered 4 and less get the interrupt. If the equality test bits are 11, all CPUs numbered 5 and less get the interrupt. This option provides the capability to interrupt all CPUs, which is done by setting the CPU number to the greatest number of CPUs in the system and setting the equality test bits to 11.

LOSP Channel

The function of the LOSP channel is to connect the IOS to the system's CPU. The LOSP channel path is 20 bits wide (16 data bits and 4 parity bits). Odd parity is performed on the channel. All LOSP transfers are word transfers; 1 word consists of four 16-bit parcels. During a LOSP input sequence, a parity error causes all transfers to memory, following the word with the parity error, to be equal to zero. A LOSP-in parity error sets the Error flag but does not cause an interrupt. A LOSP channel interrupt is caused by a Disconnect signal from the connected device (CA = CL) or a fatal error.

The LOSP and support channels on CRAY T90 series systems can operate in either LOSP mode or MISP mode. MISP mode is selected with a software command and is described in greater detail later in this section.

Figure 7 and Figure 8 illustrate the control and data paths and options associated with the LOSP channel input and output sequences.

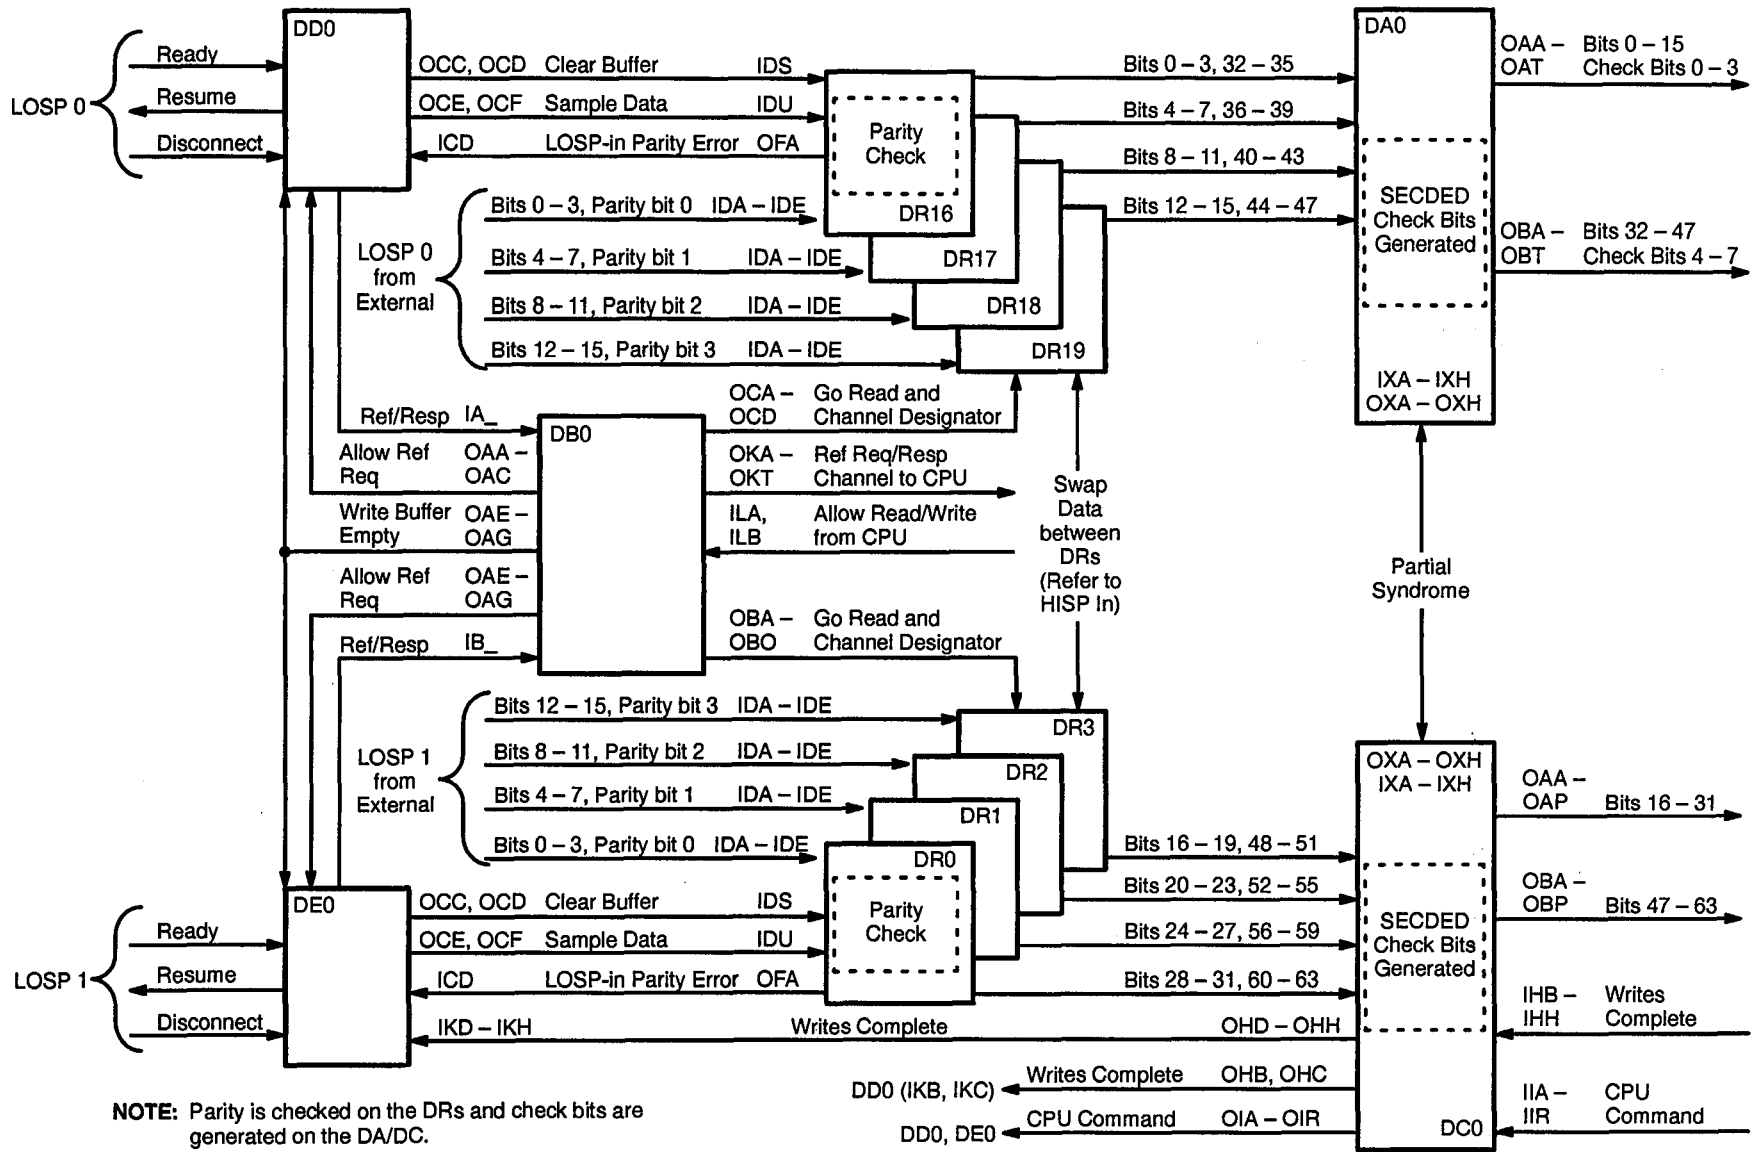


Figure 7. LOSP 0 and 1 Input Control and Data

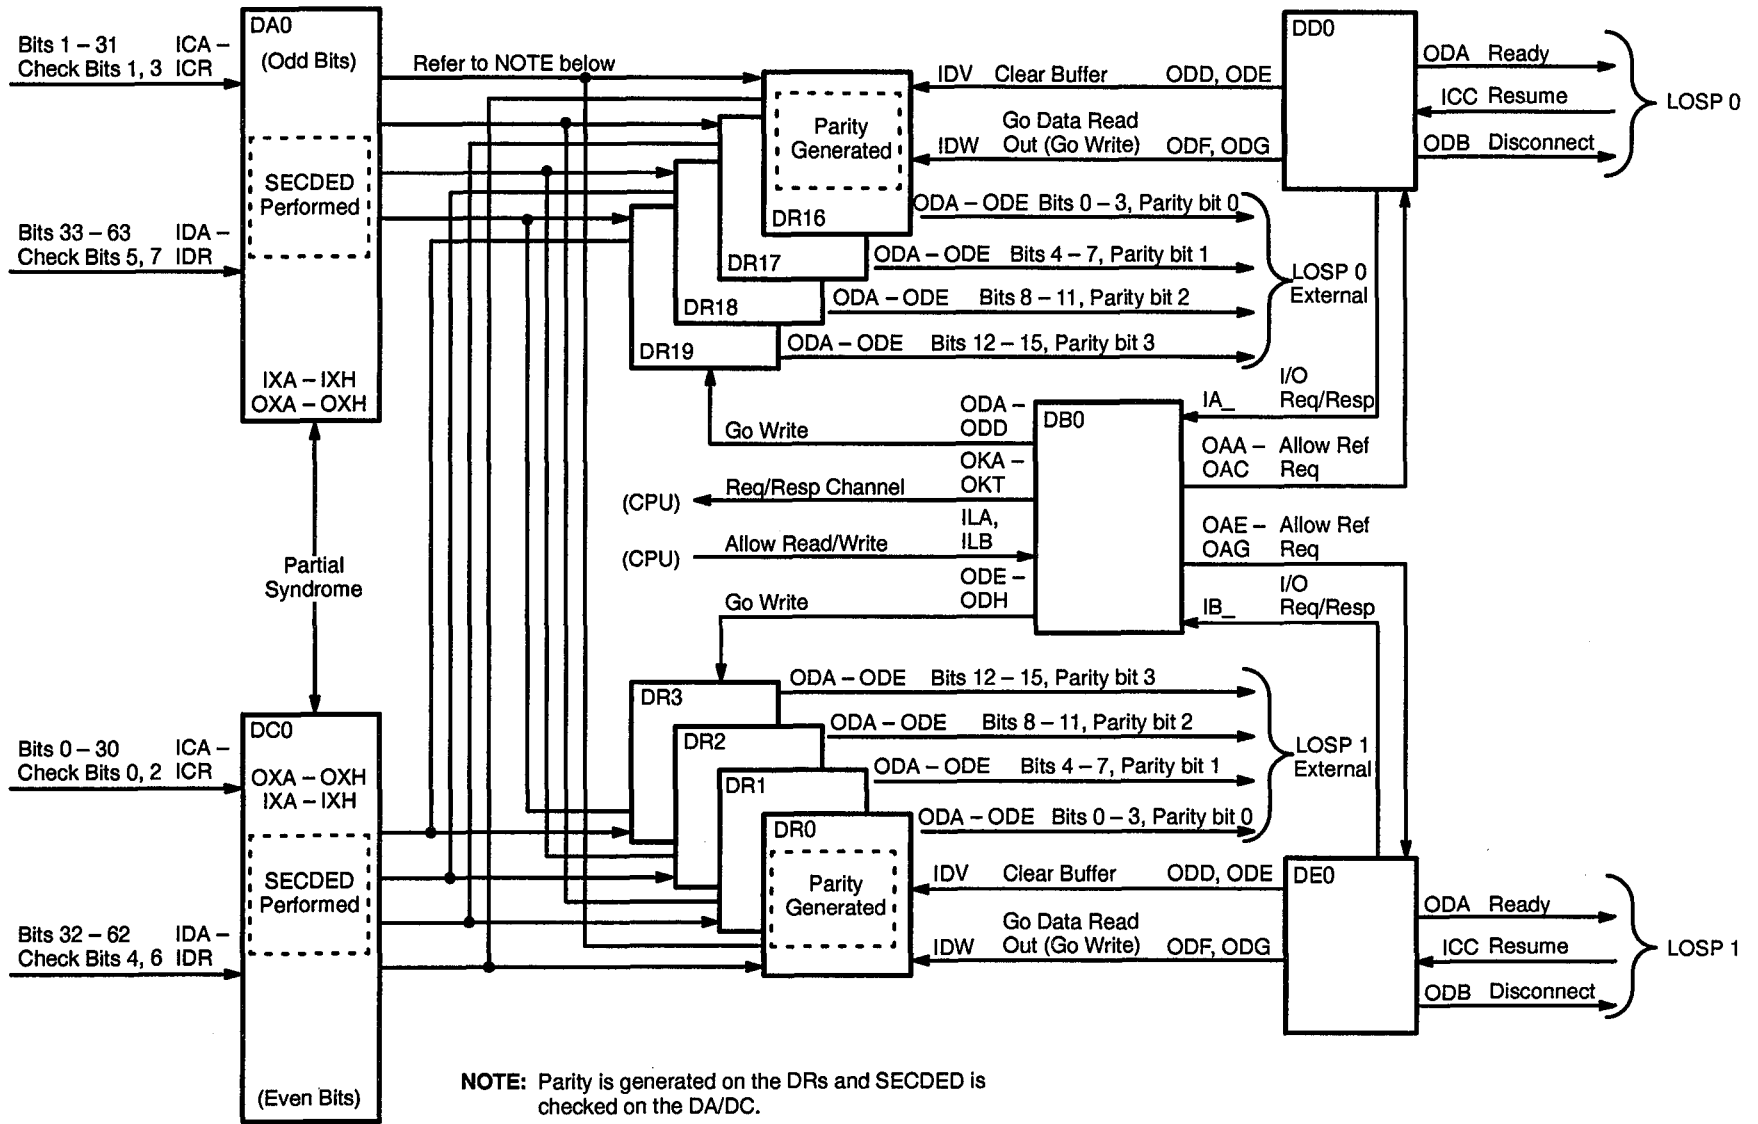


Figure 8. LOSP 0 and 1 Output Control and Data

LOSP Protocol

The LOSP channel operates at 6 Mbytes/s and is similar to the LOSP channels in the CRAY Y-MP and CRAY C90 series computer systems. The data transfer is controlled by two signals: Ready and Resume. The Ready signal is sent with the data; the Resume signal is sent by the receiving device. Both the input and output channels use this protocol.

Ready Signal

The Ready signal is sent with each parcel of data. This signal indicates that the data on the data line is valid. The Ready signal is a 50-ns pulse.

Data Lines 2⁰ through 2¹⁵

The data lines transmit 16-bit parcels of data between the transmitting and receiving devices. The channel samples data after the leading edge of the Ready signal is received. Data integrity is verified by 4 parity bits transmitted with the data.

Parity Bits

Parity bit signals 0 through 3 accompany each 16-bit parcel of data. Each of the four parity bit signals is assigned to one 4-bit group of data bits. The parity bits are set or cleared to give odd parity to the resulting 5-bit group (4 data, 1 parity).

Resume Signal

The receiving device sends the resume signal to the sending device to indicate that data has been received and that the receiving device is ready for another 16 bits of data. The Resume signal is a 50-ns pulse.

Disconnect Signal

The sending device sends the Disconnect signal to the receiving device to indicate the end of the transmission. The Disconnect signal deactivates the channel. When a channel is disconnected in the mainframe, an interrupt is generated (if the channel is enabled for interrupts).

LOSP Channel Instructions

Any CPU can request any LOSP channel to perform a read or write operation. The following list shows the sequence of the instructions issued.

- 0012j0 - (*Aj*) is the channel number. The instruction issued clears any interrupts: clear.error, clear done, and enable.
- 0011jk - (*Aj*) is the channel number, and (*Ak*) is the channel limit address (CL).
- 0010jk - (*Aj*) is the channel number, and (*Ak*) is the channel current address (CA). This instruction activates the channel.

Table 6 lists and explains all of the LOSP channel instructions for both read and write operations.

Table 6. LOSP Channel Instructions

Machine Instruction	CAL Syntax	Input LOSP	Output LOSP
0010jk	CA,Aj Ak	Set 35-bit CA Start channel	Set 35-bit CA Start channel
0011jk	CL, Aj Ak	Set 32-bit CL	Set 32-bit CL
0012j0	CI,Aj	Clear interrupt Clear error Clear done Enable interrupt	Clear interrupt Clear error Clear done Clear master clear Enable interrupt
0012j1	MC,Aj	Clear interrupt Clear error Clear done Clear ready held Enable interrupt	Clear interrupt Clear error Clear done Set master clear Enable interrupt
0012j2	DI,Aj	Disable interrupt	Disable interrupt
0012j3	EI,Aj	Enable interrupt	Enable interrupt
033i00	Ai CI	Transmit interrupting channel number to Ai	Transmit interrupting channel number to Ai
033ij0	Ai CA,Aj	Read CA	Read CA
033ij1	Ai CE,Aj	Read status & errors Bits 0 – 28: 0 Bit 42: unexpected ready Bit 43: sequence error Bit 44: parity error Bit 45: DBE in mainframe Bit 46: Fatal error Bits 47 & 63: Not done	Read status & errors Bits 0 – 29: 0 Bit 42: extra Resume Bit 43: Disc. Resume detected Bit 44: Resume while active Bit 45: DBE on read Bit 46: Fatal error Bits 47 & 63: Not done

I/O Commands

The DC option receives, from the CPU, four 16-bit packets that contain either the limit address register contents or the current address register contents along with the channel number, CPU number, and command bits 0 through 7. A Go I/O Command signal is sent with the first packet. These packets of data are routed through the DC option to both the DD option (for LOSP 0) or DE option (for LOSP 1). Table 7 describes the bit information for each of the four packets.

Because the DD and DE options handle both input and output for a LOSP channel, there are two channel limit registers and two channel current address registers per option.

The command codes interpreted by the DD or DE option are as follows:

- Command 11: enter CA
- Command 12: enter CL
- Command 14, 15, 16, and 17: clear interrupt
- Command 20: read current address
- Command 21: read error status

Table 7. DC Option I/O Command Packets

Bit Position	1st Packet	2nd Packet	3rd Packet	4th Packet
Bit 00	Ak data 00	Ak data 16	XX	Command bit 00
Bit 01	Ak data 01	Ak data 17	XX	Command bit 01
Bit 02	Ak data 02	Ak data 18	XX	Command bit 02
Bit 03	Ak data 03	Ak data 19	XX	Command bit 03
Bit 04	Ak data 04	Ak data 20	XX	Command bit 04
Bit 05	Ak data 05	Ak data 21	XX	Command bit 05
Bit 06	Ak data 06	Ak data 22	XX	Command bit 06
Bit 07	Ak data 07	Ak data 23	XX	Command bit 07
Bit 08	Ak data 08	Ak data 24	Channel number 00	CPU number bit 00
Bit 09	Ak data 09	Ak data 25	Channel number 01	CPU number bit 01
Bit 10	Ak data 10	Ak data 26	Channel number 02	CPU number bit 02
Bit 11	Ak data 11	Ak data 27	Channel number 03	CPU number bit 03
Bit 12	Ak data 12	Ak data 28	Channel number 04	CPU number bit 04
Bit 13	Ak data 13	Ak data 29	Channel number 05	CPU number bit 05
Bit 14	Ak data 14	Ak data 30	Channel number 06	CPU number bit 06
Bit 15	Ak data 15	Ak data 31	Channel number 07	CPU number bit 07

50-Mbyte/s MISP Protocol

The LOSP channel and the support channel can run in MISP mode. A MISP channel operates at 50 Mbytes/s. MISP protocol, described below, is similar to the 6-Mbyte/s LOSP channel protocol.

Ready Signal

The Ready signal is a pulse 18.75 ns long. The Ready signal indicates to the channel that data transmission will follow on the data lines. Each ready pulse corresponds to a parcel of data.

Data Lines 2⁰ through 2¹⁵

The data lines transmit 16-bit parcels of data between the transmitting and receiving devices. The channel typically samples data 37.5 ns after the leading edge of the appropriate Ready signal is received. Typically, data is sent 18.75 ns after the leading edge of the Ready signal pulse and remains valid for 37.5 ns.

Parity Bits

Parity bit signals 0 through 3 accompany each parcel of data. Each of the 4 parity bit signals is assigned to one 4-bit group of data bits. During a LOSP-out sequence, the parity is generated prior to sending the 16 bits of data to the external device.

Resume Signal

The Resume signal is a pulse 18.75 ns long. The receiver sends the Resume signal to the data transmitter, which indicates that parcel 0 of the transmitted word has been received and that the receiver is ready for the next full-word (64-bit) transfer. Each Resume signal corresponds to 4 parcels of data and 4 Ready signals. The final Resume signal of a transfer is an exception, however; it is issued in response to a Disconnect signal and can be sent only after the final word transfer is successfully stored.

Disconnect Signal

Like the Ready and Resume signals, the Disconnect signal is a pulse that is 18.75 ns long. The data transmitter sends a Disconnect signal to the receiver, which indicates that the transmission is complete. A Disconnect signal can be sent only after the last Resume signal for the last word of data is received by the transmitting device.

Disconnecting Resume Signal

The Disconnecting Resume signal reflects an error or interrupt condition in the receiving device. This signal disables channel communications between a receiver and a transmitter. It acts as a Master Clear signal to both the transmitter and receiver. The Disconnecting Resume signal uses the same wire as the Resume signal and is differentiated by the width of the signal. The Disconnecting Resume signal has a 56.25-ns pulse instead of the 18.75-ns pulse of a normal Resume signal.

HISP Channel

Each IO module contains eight HISP channels. These channels are distributed across the four logical quadrants on an IO module. The HISP channels are referred to as HISP 0 and HISP 1 in quadrant 0, HISP 2 and HISP 3 in quadrant 1, HISP 4 and HISP 5 in quadrant 2, and HISP 6 and HISP 7 in quadrant 3.

A HISP channel operates at 200 Mbytes/s. A block of data in a HISP transfer consists of sixteen 72-bit words. Memory address and block length are transferred in five 12-bit packets from the master device to the mainframe. The block length register contains 16 bits; each bit represents a transfer of sixteen 72-bit words. The high-speed address register contains 32 bits. Table 8 lists the options that receive address and block length bits from the master device.

The mainframe operates as a slave device for a HISP transfer. There are no instructions that the mainframe issues that activate a HISP channel transfer; all channel transfers start from a master device such as the IOS-E.

Table 8. HISP Address and Block Length Options

Channel	Address Bits	Block Length Bits
HISP 0 input	DR000	DR001
HISP 0 output	DR018	DR019
HISP 1 input	DR002	DR003
HISP 1 output	DR016	DR017
HISP 2 input	DR004	DR005
HISP 2 output	DR022	DR023
HISP 3 input	DR006	DR007
HISP 3 output	DR020	DR021
HISP 4 input	DR008	DR009
HISP 4 output	DR026	DR027
HISP 5 input	DR010	DR011
HISP 5 output	DR024	DR025
HISP 6 input	DR012	DR013
HISP 6 output	DR030	DR031
HISP 7 input	DR014	DR015
HISP 7 output	DR028	DR029

HISP Input Sequence

The IOS-E initiates a HISP transfer. The following exchange of control and data signals occurs between the IOS-E and the mainframe during a write operation. Figure 9 illustrates the exchange of control during the sequence.

1. **Clear Channel:** The Clear Channel signal clears the mainframe and enables it to receive data.
2. **Transmit Address:** The mainframe activates the Transmit Address signal when it can accept the address and block length. The mainframe deactivates the signal after it has received five Address Ready signals.
3. **Address Ready:** The Address Ready signal informs the mainframe that the IOS-E is sending the address and block length.

4. **Address and Block Length:** The IOS-E sends five packets that contain the address and block length. Each transfer accompanies an Address Ready signal. The five transfers consist of the following bits:
 - First transfer: address bits 0 through 3 and 20 through 23; block length bits 0 through 3
 - Second transfer: address bits 4 through 7 and 24 through 27; block length bits 4 through 7
 - Third transfer: address bits 8 through 11 and 28 through 31; block length bits 8 through 11
 - Fourth transfer: address bits 12 through 15 and 32 through 35; block length bits 12 through 15
 - Fifth transfer: address bits 16 through 19 and 36 through 39; block length bits 16 through 19
5. **Transmit Data:** The mainframe sends a Transmit Data signal when it can accept 16 words of data from the IOS-E.
6. **Data Ready:** A Data Ready signal is sent to the mainframe with each 72-bit word of data from the IOS-E.
7. Steps 5 and 6 repeat until the last word of data is transferred.
8. **Last Word flag:** The Last Word Flag signal is sent from the IOS-E when the last word of data is sent. The Last Word Flag accompanies the Data Ready signal on the last word.
9. **Done flag:** The Done flag is set within the IOS-E to indicate that the block length is zero and no errors have occurred.

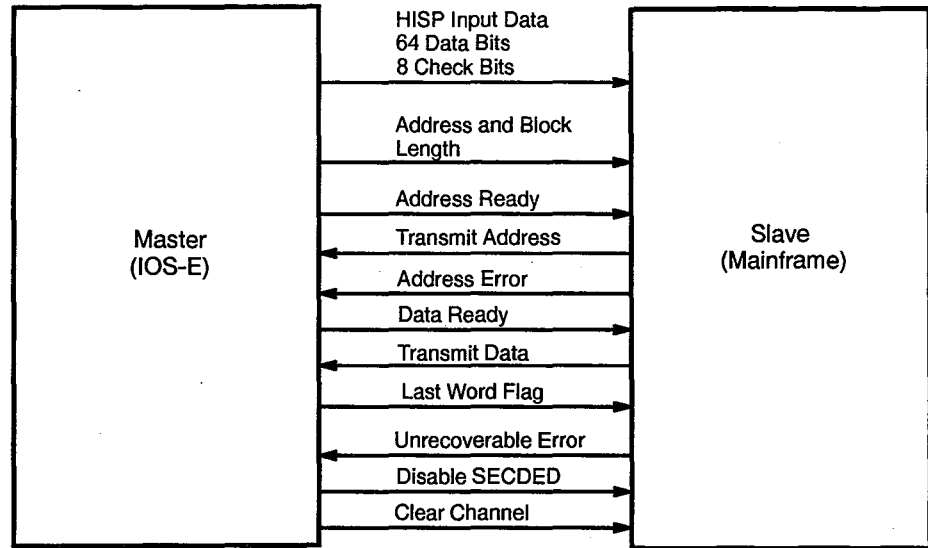


Figure 9. HISP Input Sequence

Figure 10 is a block diagram of the data flow through the options during an input sequence. Figure 11 illustrates the control signal, address, and block length flow through the options on the IO module during an input sequence.

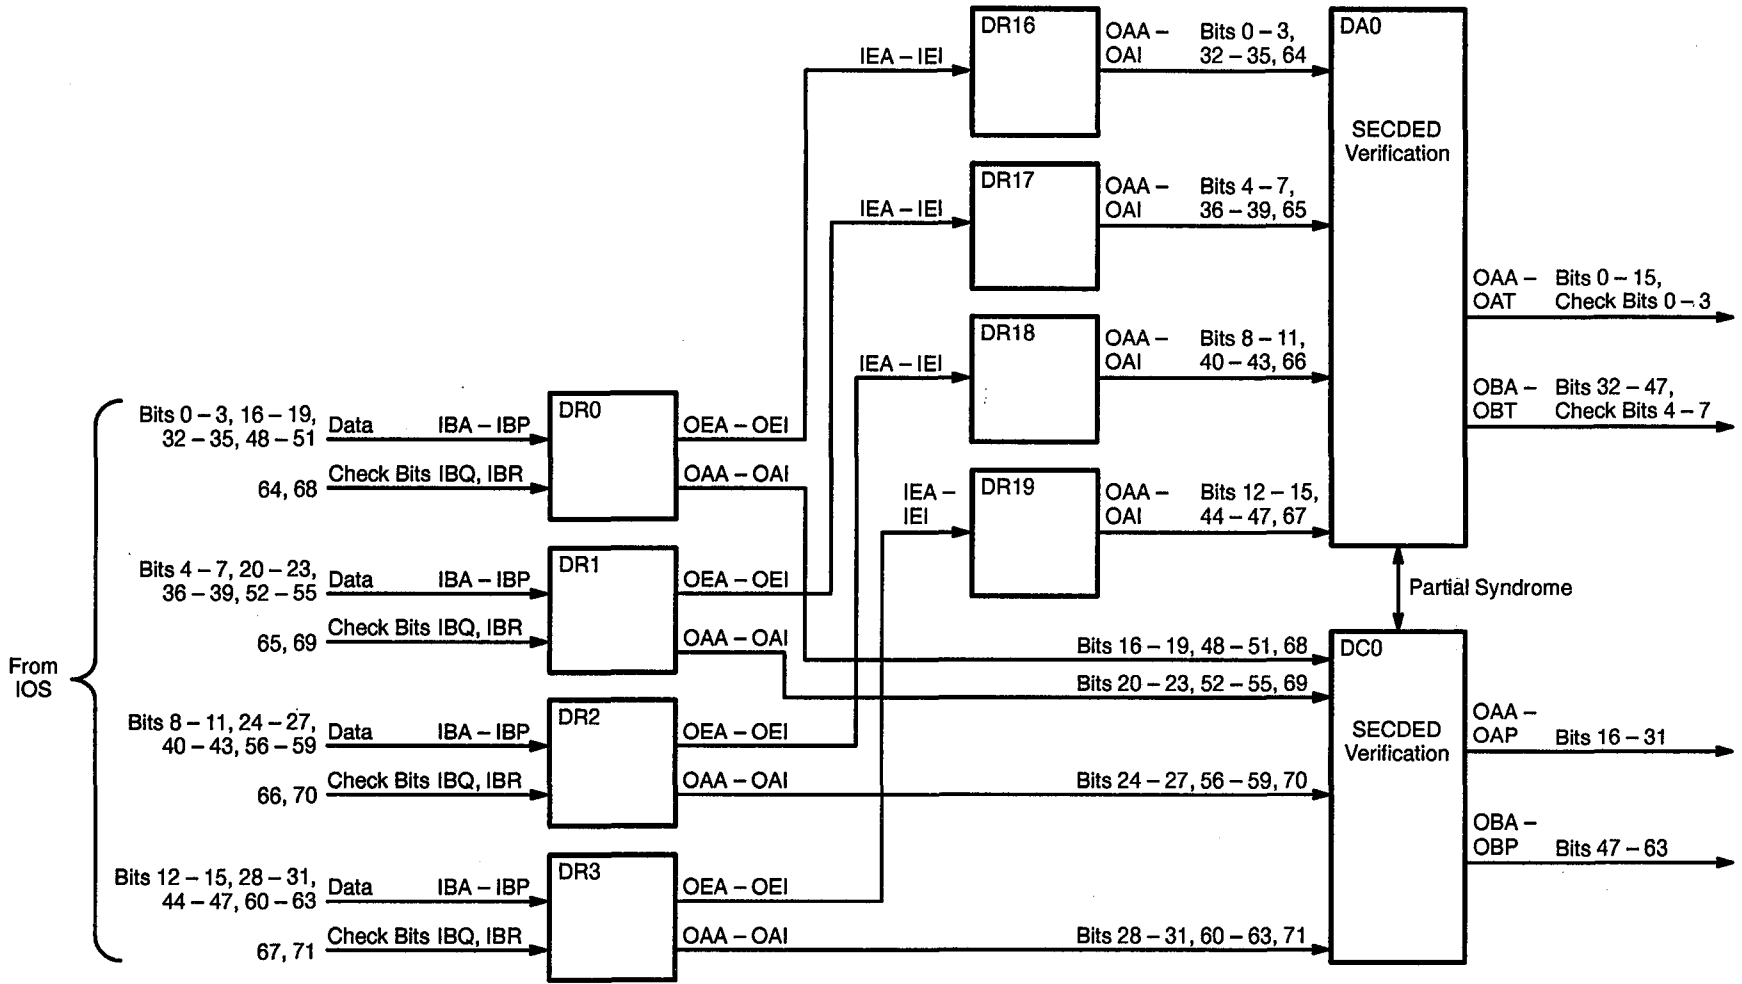


Figure 10. HISP 0 Input Data

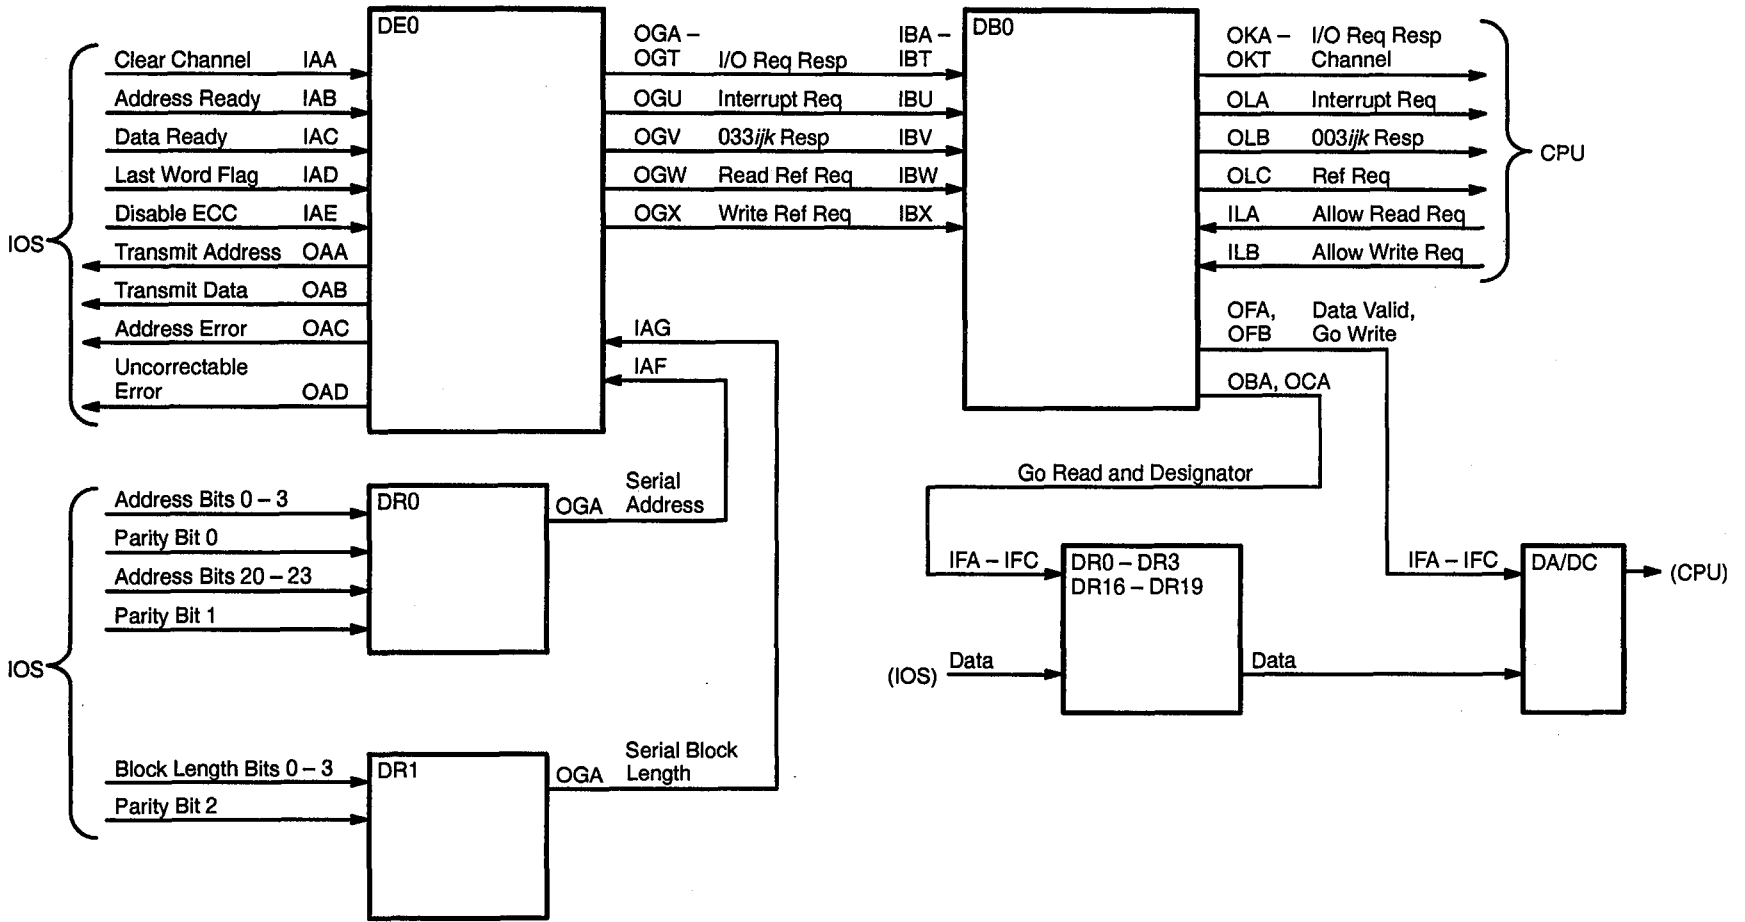


Figure 11. HISP 0 Input Control and Address

HISP Output Sequence

The IOS-E initiates a HISP transfer. The following exchange of control and data signals occurs between the IOS-E and the mainframe during a read operation. Figure 12 illustrates the exchange of control that takes place during an output sequence.

1. Clear Channel: The Clear Channel signal clears the mainframe and enables it to receive data.
2. Transmit Address: The mainframe activates the Transmit Address signal when it can accept the address and block length. The mainframe deactivates the signal after it has received five Address Ready signals.
3. Address Ready: The Address Ready signal informs the mainframe that the IOS-E is sending the address and block length.
4. Address and Block Length: The IOS-E sends five packets that contain the address and block length. Each transfer accompanies an Address Ready signal. The five transfers consist of the following bits:
 - First transfer: address bits 0 through 3 and 20 through 23; block length bits 0 through 3
 - Second transfer: address bits 4 through 7 and 24 through 27; block length bits 4 through 7
 - Third transfer: address bits 8 through 11 and 28 through 31; block length bits 8 through 11
 - Fourth transfer: address bits 12 through 15 and 32 through 35; block length bits 12 through 15
 - Fifth transfer: address bits 16 through 19 and 36 through 39; block length bits 16 through 19
5. Transmit Data: The IOS-E sends a Transmit Data signal when it can accept 16 words of data from the mainframe.
6. Data Ready: A Data Ready signal is sent to the IOS-E with each 72-bit word of data from the mainframe.
7. Steps 5 and 6 repeat until the last word of data is transferred.

8. **Last Word Flag:** The Last Word Flag signal is sent to the IOS-E when the last word of data is sent. The Last Word Flag accompanies the Data Ready signal on the last word.
9. **Done flag:** The Done flag is set within the IOS-E to indicate that the block length is 0 and no errors have occurred.

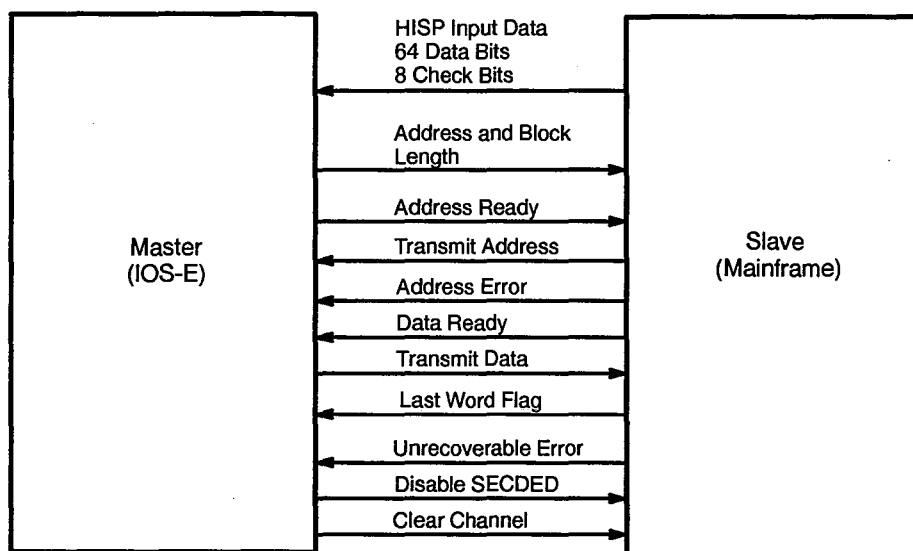


Figure 12. HISP Output Sequence

Figure 13 illustrates the control signal, address, and block length flow through the options on the IO module during an output sequence. Figure 14 is a block diagram of the data flow through the options during an output sequence.

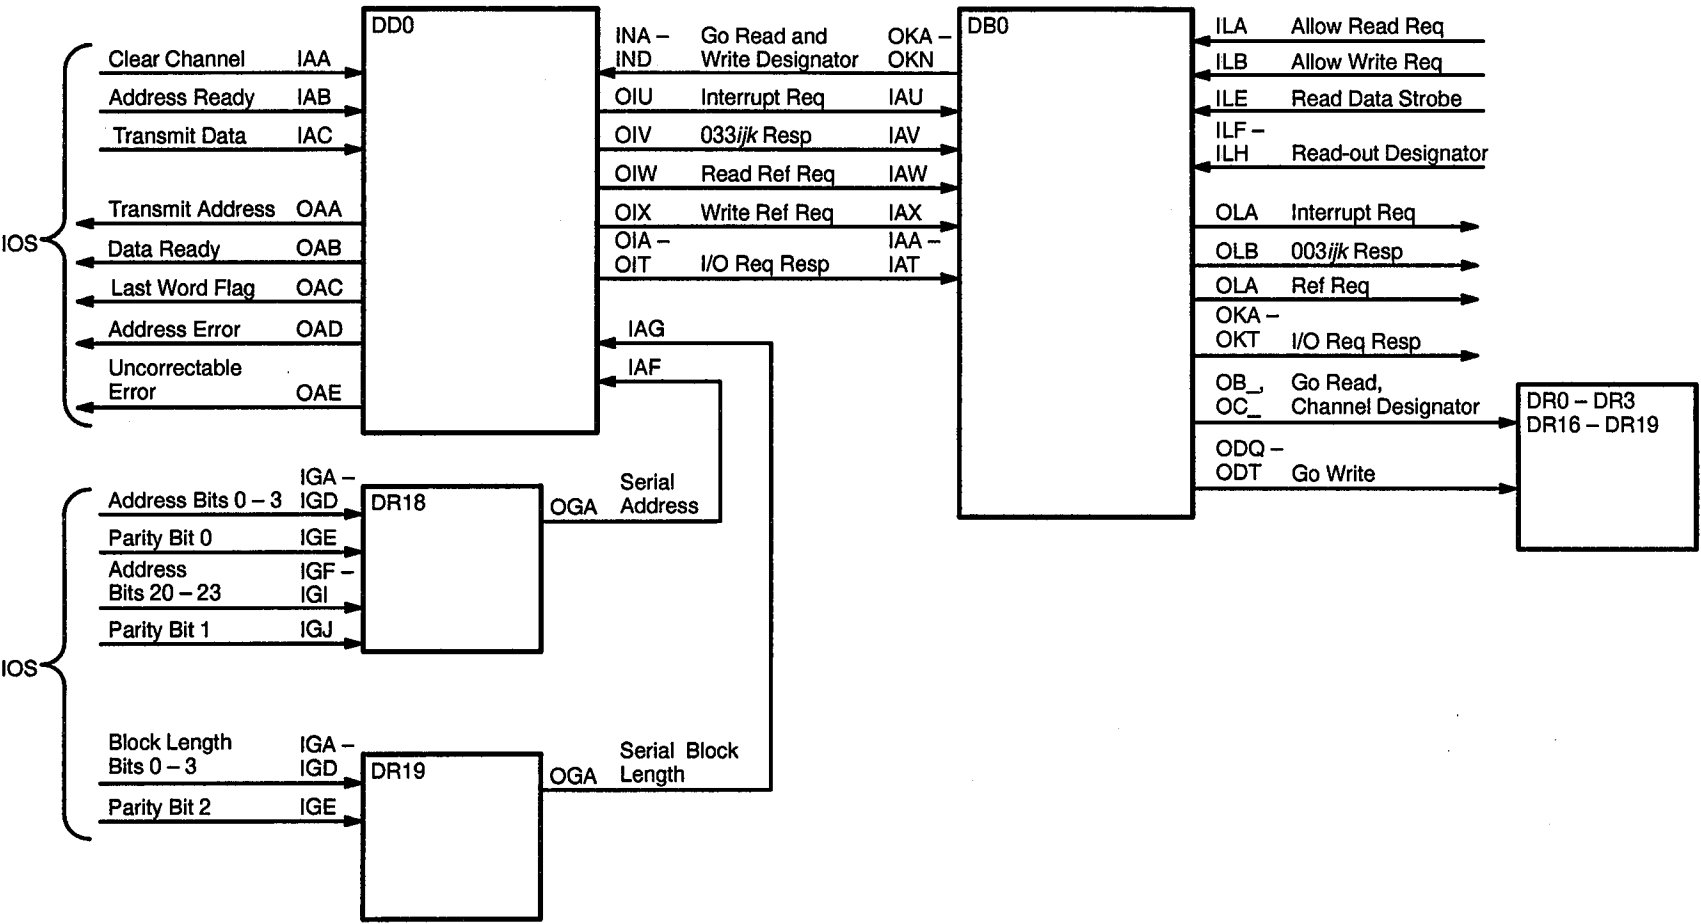


Figure 13. HISP 0 Output Control and Address

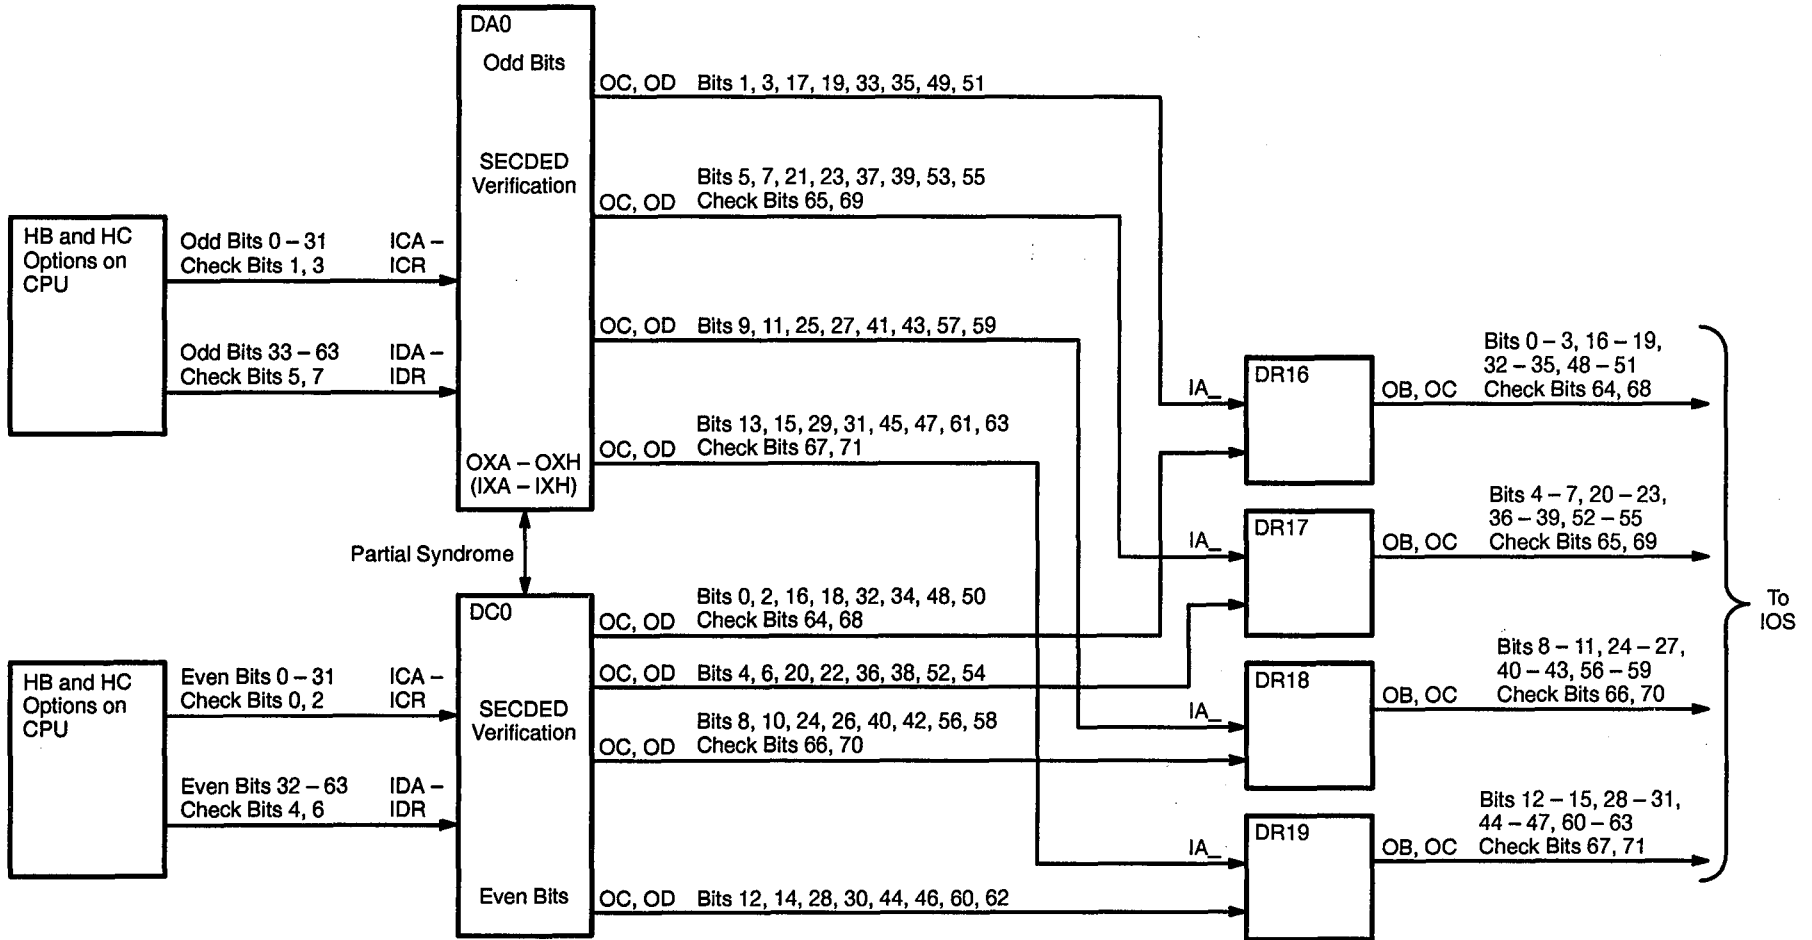


Figure 14. HISP 0 Output Data

HISP Errors

Certain error conditions can occur during HISP channel activity. Some errors terminate the transfer; others do not. Table 9 lists and describes the HISP errors.

Table 9. HISP Errors

Error	Description
Address channel parity error	A parity error was detected on the DR option receiving memory address and/or block length. This error terminates the transfer.
Extra Address Ready signal	An Address Ready signal was detected after the fifth address/block length transfer. This error terminates the transfer.
Address Ready signal without Transmit Address signal	An Address Ready signal was detected but the mainframe had not sent the Transmit Address signal. This error terminates the transfer.
Missing Address Ready signal	A Data Ready signal was detected between the 1st and 5th address/block length transfer. This error terminates the transfer.
SECDED error detected on read data from CPU or write to CPU	For a read operation, an error occurred on the DA/DC options while data was en route from the CPU to the DR options. For a write operation, an error occurred on the DA/DC options while data was en route to the CPU.
SECDED error on CPU write buffers	Unrecoverable memory error signal.
SBCDBD error on CPU Read	Unrecoverable memory error signal.
Clear Channel signal and reference pending	If a Clear Channel signal arrives and there is a pending write reference to the CPU, an error condition occurs to ensure the channel does not try a new transfer until the reference is completed. This error terminates the transfer.
Clear Channel signal and no HISP writes complete signal	If a Clear Channel signal arrives and there is a pending write reference to the CPU, an error condition occurs to ensure that the channel does not try a new transfer until the reference is complete. This error terminates the transfer.
Last Word Flag signal and Block Length \neq 00	The Last Word Flag signal was detected but the block length register did not equal 0. This error terminates the transfer.
No Last Word Flag signal and Block Length = 00	The Block Length register equals 0 but no Last Word Flag signal is detected. This error terminates the transfer.
Last Word Flag signal and Block Length = 00 and another Data Ready	The Last Word Flag signal was received and the Block Length register equals 0 and another Data Ready signal is detected. This error terminates the transfer.

VHISP Channel

Each IO module contains four VHISP channels. A fully configured CRAY T90 series system can include 16 VHISP channels. Each VHISP channel is identified by a specific channel number.

A VHISP transfer is under the direct control of the mainframe. The SSD-E is the slave device; the mainframe is the master device. Any CPU can request either a VHISP read from the SSD-E or write to the SSD-E using any VHISP channel.

VHISP Instructions

Table 10 lists the VHISP instructions.

Table 10. VHISP Instructions

Machine Instruction	Cal Syntax	Function
0010jk	CA,Aj Ak	Set CA (first sends 32-bit SSD address, second sends 32-bit CPU address)
0011jk	CL,Aj Ak	Set BL and start channel Bits 0 – 23: BL Bit 31: transfer direction Bit 24 and 25: reserved
0012j0	CI,Aj	Clear interrupt Clear channel sequence Clear error status Clear done Clear interrupt
0012j2	DI,Aj	Disable interrupt
0012j3	EI,Aj	Enable interrupt
033i00	Ai CI	Transmit interrupting channel number to Ai
033ij0	Ai CA,Aj	Read CA
033ij1	Ai CE,Aj	Read status and errors Bits 0 – 23: remaining BL Bits 24 – 41: 0 Bit 42: transfer in progress Bit 43: BL error Bit 44: double-bit error in SSD Bit 45: double-bit error in mainframe Bit 46: fatal error Bit 47: not done Bits 48 – 62: 0 Bit 63: not done

The 001000 instruction is a pass (no-operation) instruction. The 0010*jk* (*jk* ≠ 0) and 0011*jk* instructions initiate a channel transfer. For a VHISP channel, the 0010*jk* must be issued twice, followed by instruction 0011*jk*. The first 0010*jk* instruction sets the starting block address in the SSD-E. The second 0010*jk* instruction sets the channel address (CA) in the mainframe. The 0011*jk* instruction sets the block length (BL) and starts the transfer.

VHISP Addressing

When the VHISP channel is online, the mainframe supplies the SSD-E address and block length for read or write operations. The address and block length are sent from the DR options. The DR options listed in the table refer only to quadrant 0 of the IO module.

The mainframe sends 32 address bits that are loaded into the address register of the SSD-E. The mainframe also sends 32 block length bits to the SSD-E. The SSD-E defines a block of data to be 32 words, whereas the mainframe defines a block of data as 64 words.

VHISP Input Sequence

The following exchange of control and data takes place during a read to the mainframe. The mainframe (master) initiates the read operation.

1. **Clear Channel:** The mainframe sends the Clear Channel signal to the SSD-E to clear and initiate the VHISP channel.
2. **Clear Acknowledge:** Once the SSD-E has cleared the channel, it returns the Clear Acknowledge signal.
3. **Address and Block Length:** The mainframe sends address and block length bits to the SSD-E.
4. **Transmit Enable:** The mainframe sends this signal to the SSD-E to indicate that it has an empty buffer ready to be filled.
5. **Read Data Ready:** The SSD-E sends this signal once for every 16 144-bit words.
6. **Data:** Data leaves the SSD-E 144 bits at a time (72 bits for even word and 72 bits for odd word).
7. Steps 4, 5, and 6 continue until the last word of the last block is sent by the SSD-E.

Figure 15 illustrates the exchange of control that takes place during a VHISP input sequence.

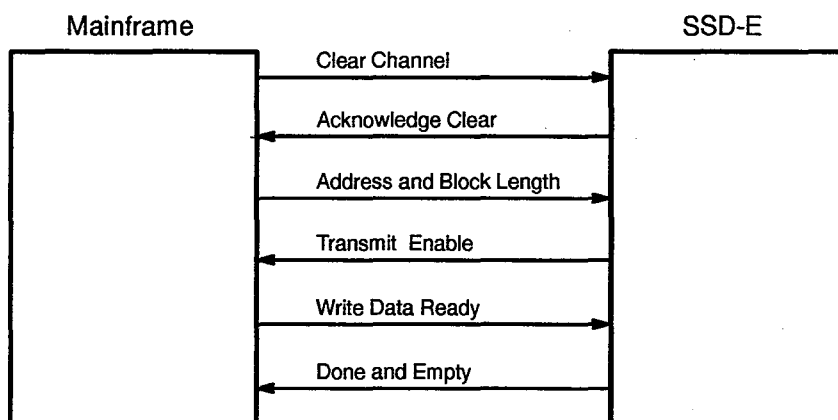


Figure 15. VHISP Input Control Signals

VHISP Input Data Path

The DR options receive input data from the SSD-E. Both an even and an odd word (72 bits each) are received. The DR options for quadrant 0 of the IO module are DR16 through DR19. The even word is received on IBA through IBR, and the odd word is received on ICA through ICR. Figure 16 shows the flow of data and control during a VHISP input sequence.

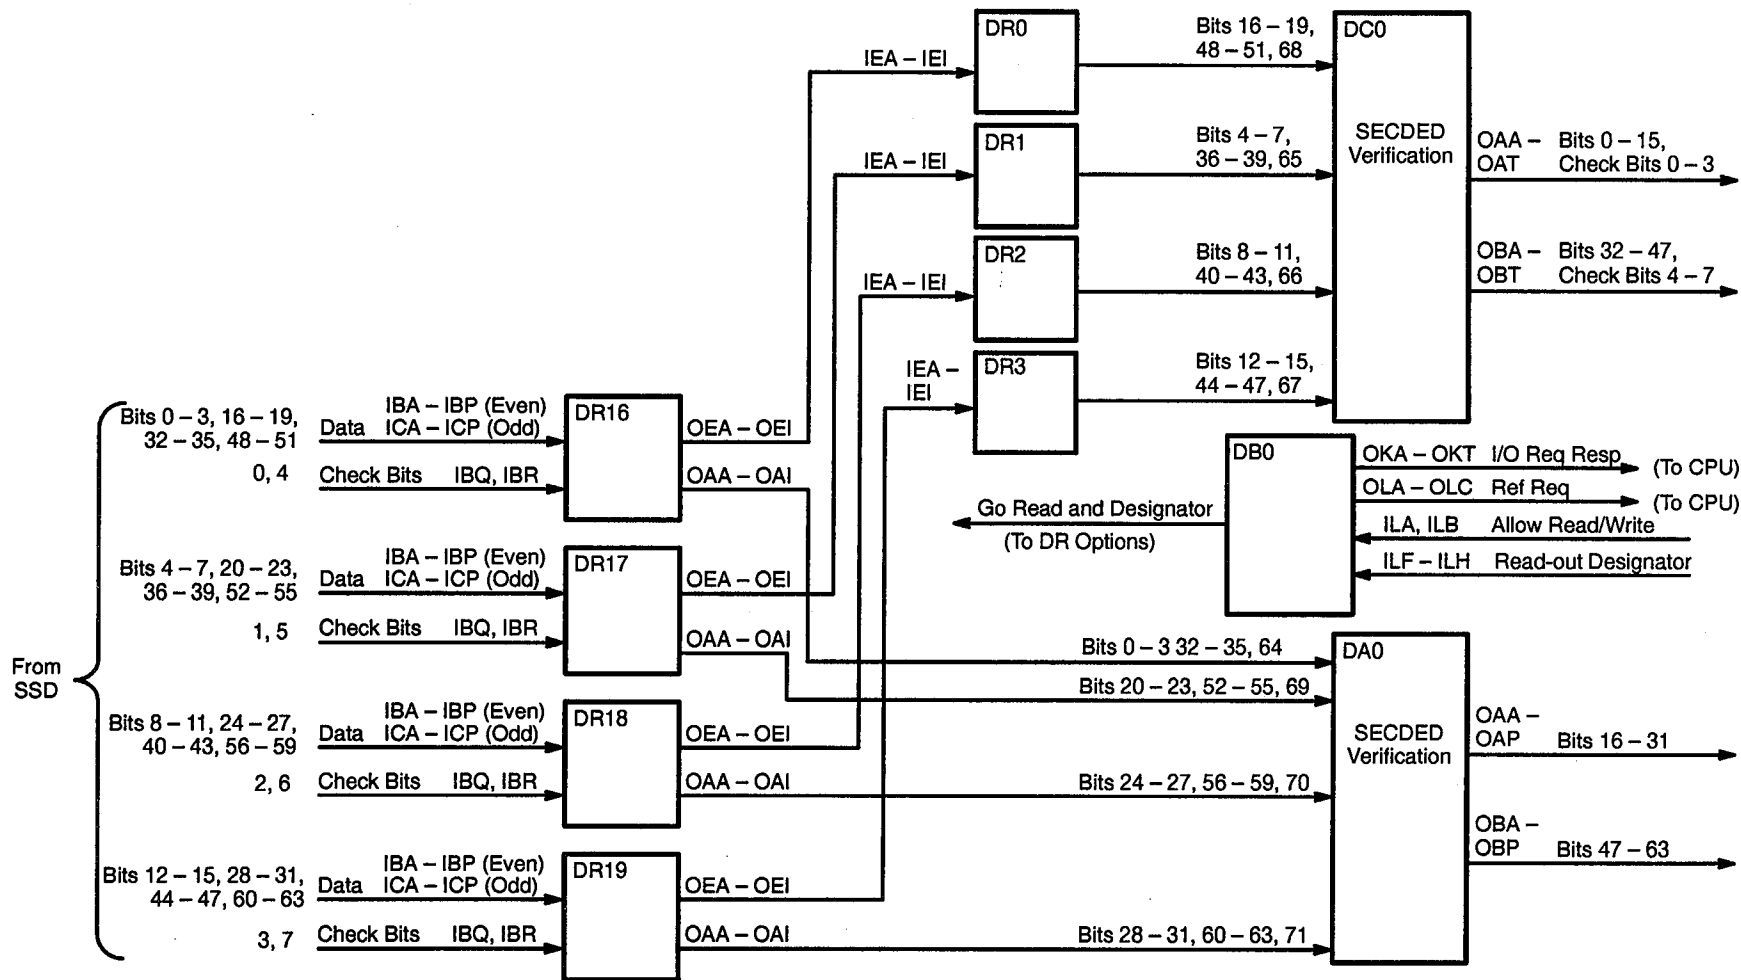


Figure 16. VHISP 0 Input Control and Data

VHISP Output Sequence

The following exchange of control and data takes place during a read from mainframe memory. The mainframe (master) initiates the read operation.

1. **Clear Channel:** The mainframe sends the Clear Channel signal to the SSD-E to clear and initiate the VHISP channel.
2. **Acknowledge Clear:** Once the SSD-E has cleared the channel, it returns the Clear Acknowledge signal.
3. **Address and Block Length:** The mainframe sends address and block length bits to the SSD-E.
4. **Transmit Enable:** The mainframe sends this signal to the SSD-E to indicate that it has an empty buffer ready to be filled.
5. **Read Data Ready:** The SSD-E sends this signal once for every 16 144-bit words.
6. **Data:** Data leaves the SSD-E 144 bits at a time (72 bits for even word and 72 bits for odd word).
7. Steps 4, 5, and 6 continue until the last word of the last block is sent by the SSD-E.

Figure 17 illustrates the exchange of control that takes place during a VHISP read function.

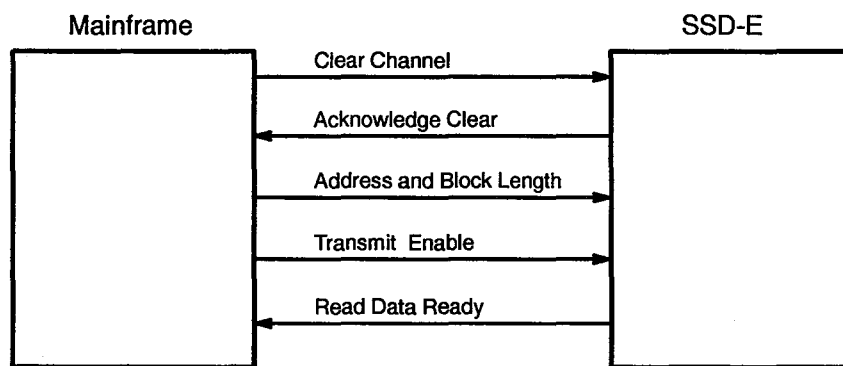


Figure 17. VHISP Output Control Signals

Figure 18 shows the flow of data and address/block length during a VHISP output sequence.

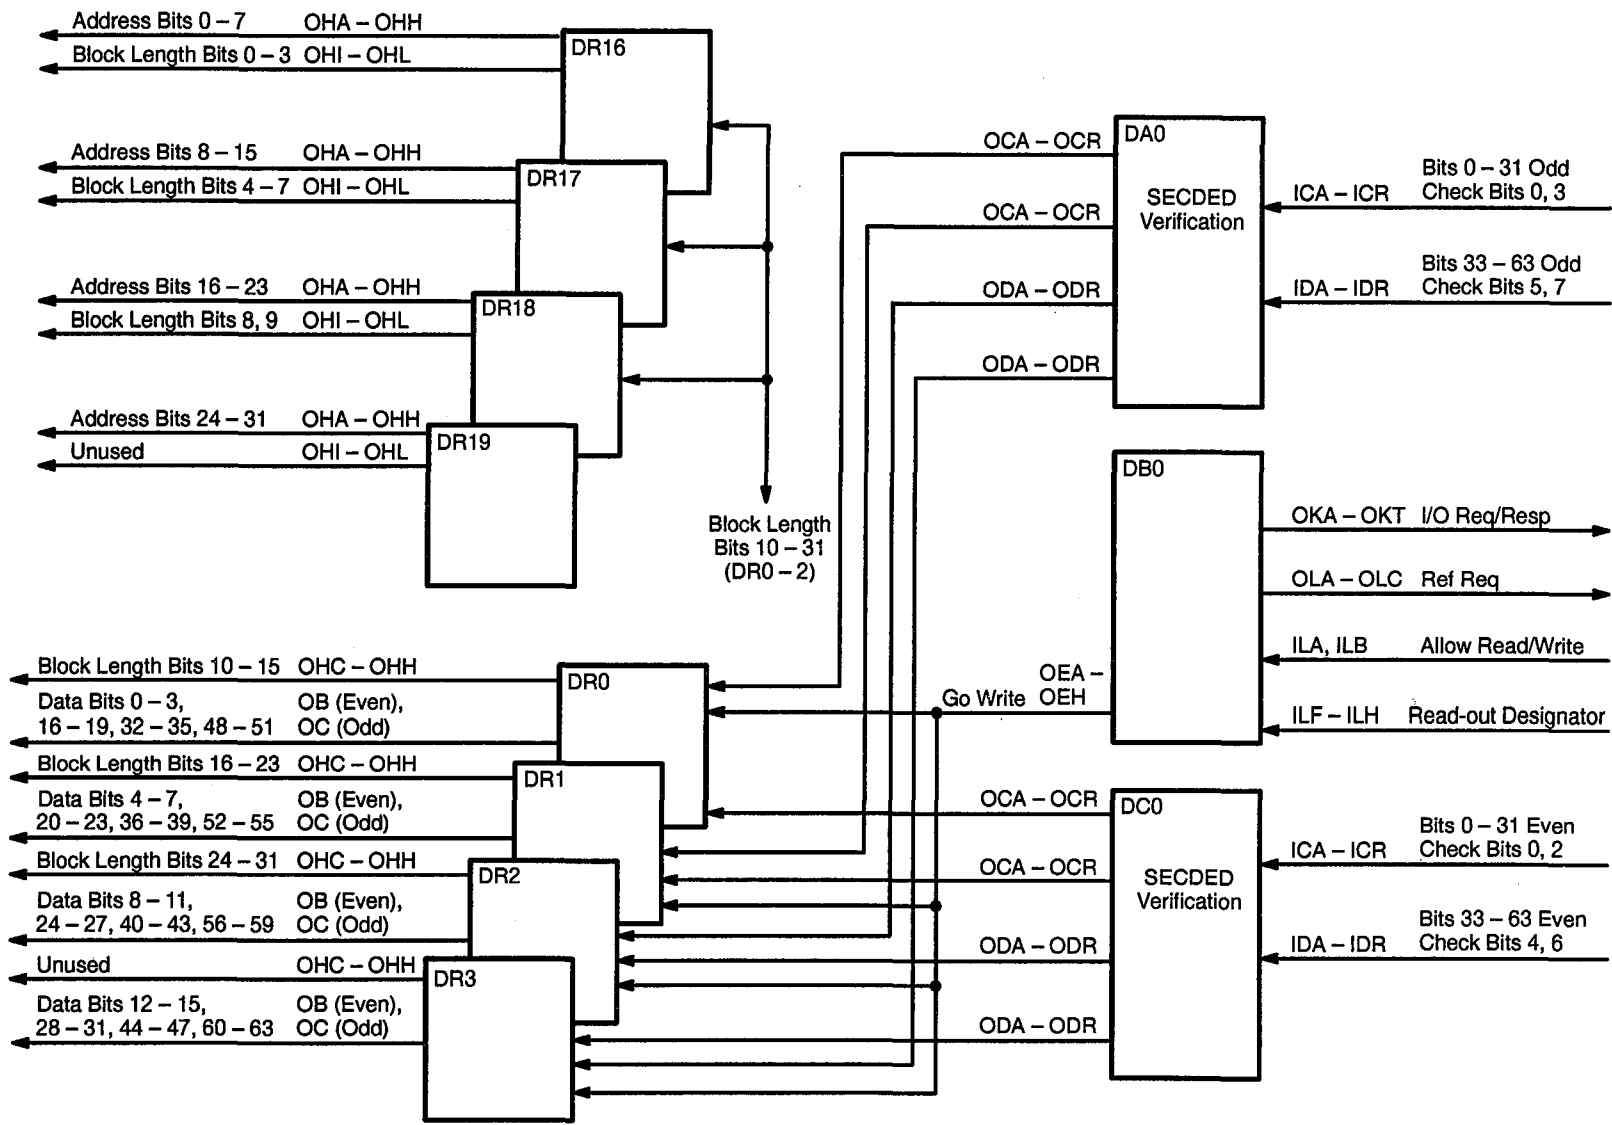


Figure 18. VHISP 0 Output Control and Data

VHISP Errors

A number of conditions can occur during a VHISP reference that cause VHISP channel errors. Some errors terminate the channel transfer; others do not. Table 11 describes the VHISP channel errors.

Table 11. VHISP Channel Errors

Error	Description
No Last Word and block length = 0	During transfer from mainframe to SSD, the SSD does not receive Last Word Flag signal, but the block length is 0. This error terminates the transfer.
Done and Empty and block length \neq 0	During transfer from SSD to mainframe, the mainframe receives the Done and Empty signal, but block length is not zero. This error terminates the transfer.
Done signal is set, Done and Empty is not set	During a transfer from SSD to mainframe, the Done flag sets, but the mainframe does not receive the Done and Empty signal. This error terminates the transfer.
Done and Empty is set, but no Last Word flag	During a transfer from mainframe to SSD, the Done and Empty flag sets, but the mainframe has not sent the Last Word Flag signal. This error terminates the transfer.
Fatal Error	Caused by an OR condition of all above errors or an outstanding reference. This error terminates the transfer.
SECEDED error on SSD during a read or write	The SSD detected a data error. If it is a single bit, it is corrected. If a double- or multiple-bit error has occurred, the transfer is terminated.
SECEDED error on mainframe during a read or write	The CPU detected a data error. If it is a single bit, it is corrected. If a double- or multiple-bit error has occurred, the transfer is terminated.
SBCDBD error during CPU read	The CPU detected a data error. If it is a single byte, it is corrected. If a double- or multiple-byte error has occurred, the transfer is terminated.

I/O Data Path through the CP Module

Any I/O data that is read from or written to memory must pass through the CP module. This is necessary because the IO module does not have a direct physical connection to memory; it uses the CPU's port D path into memory. The following paragraphs describe the write and read paths through the CP module. Refer to Figure 19 and Figure 20, which follow the text.

I/O Write Path through the CP Module

During an I/O write sequence, the data leaves the IO module on a 72-bit path: 64 data bits, and 8 checkbits for SECDED. The data enters data buffers in the HB and HC options on the CP module. The HB and HC options send the data in two 36-bit transfers to the HA0 and HA1 options.

The HA options first perform SECDED on the data; then they generate a 12-bit checkbyte for single-byte correction/double-byte detection (SBCDBD). The HA0 option sends the 76-bit words to the CH options for even memory sections; the HA1 option sends the 76-bit words to the CH options for odd sections of memory.

The maintenance channel also has a path into the HB options, which is used during DMA transfers into memory. The maintenance channel path is a serial path into the HB and HC options. The HB and HC options assemble the serial data into 64-bit word format; each option handles half the data bits for the word. The HB option generates the SECDED checkbyte for the entire word.

I/O Read Path through the CP Module

During an I/O read sequence, the CJ options in the CPU perform SBCDBD. Then the CJ options send the 64-bit data word to the HA2 and HA3 options, where an 8-bit checkbyte is generated for SECDED. The HA options send the data to the buffers on HB0 and HC0 options; HB0 receives the odd bits, and HC0 receives the even bits. The HB and HC options send the 72-bit words to the IO module.

During a maintenance channel read of memory, the data enters the HB and HC options as does any other I/O data. The HB option sends its odd data bits in a serial stream to the HC option. The HC injects its even bits into the serial stream and sends it to the HG option. From the HG option, the maintenance channel data follows the regular maintenance channel path back to the IO module.


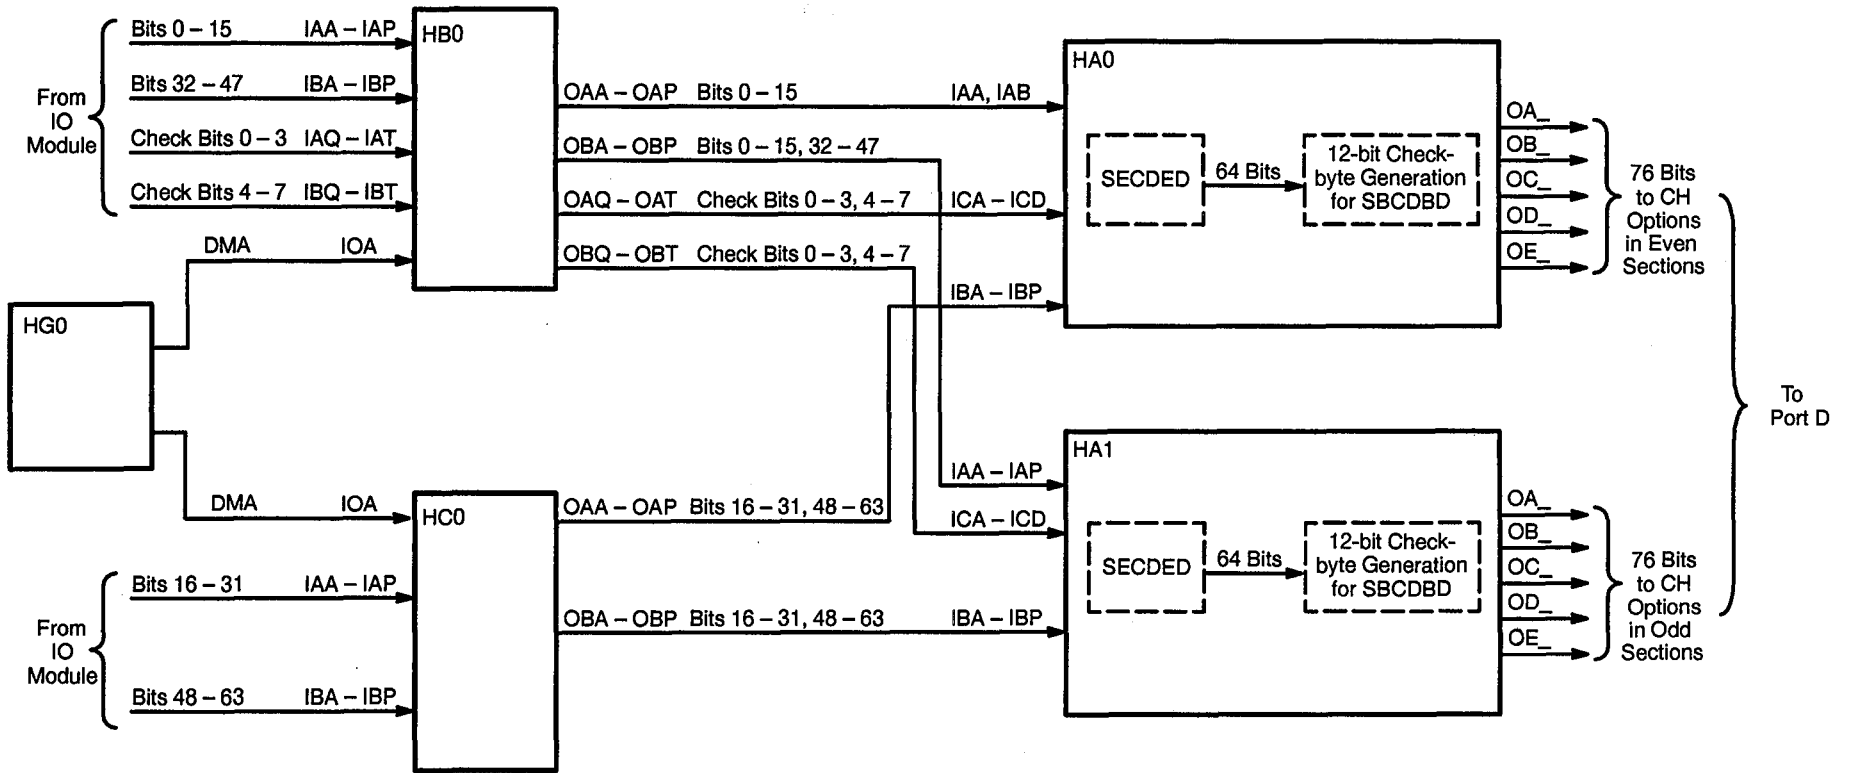


Figure 19. CPU Options – Write (IO to Memory)

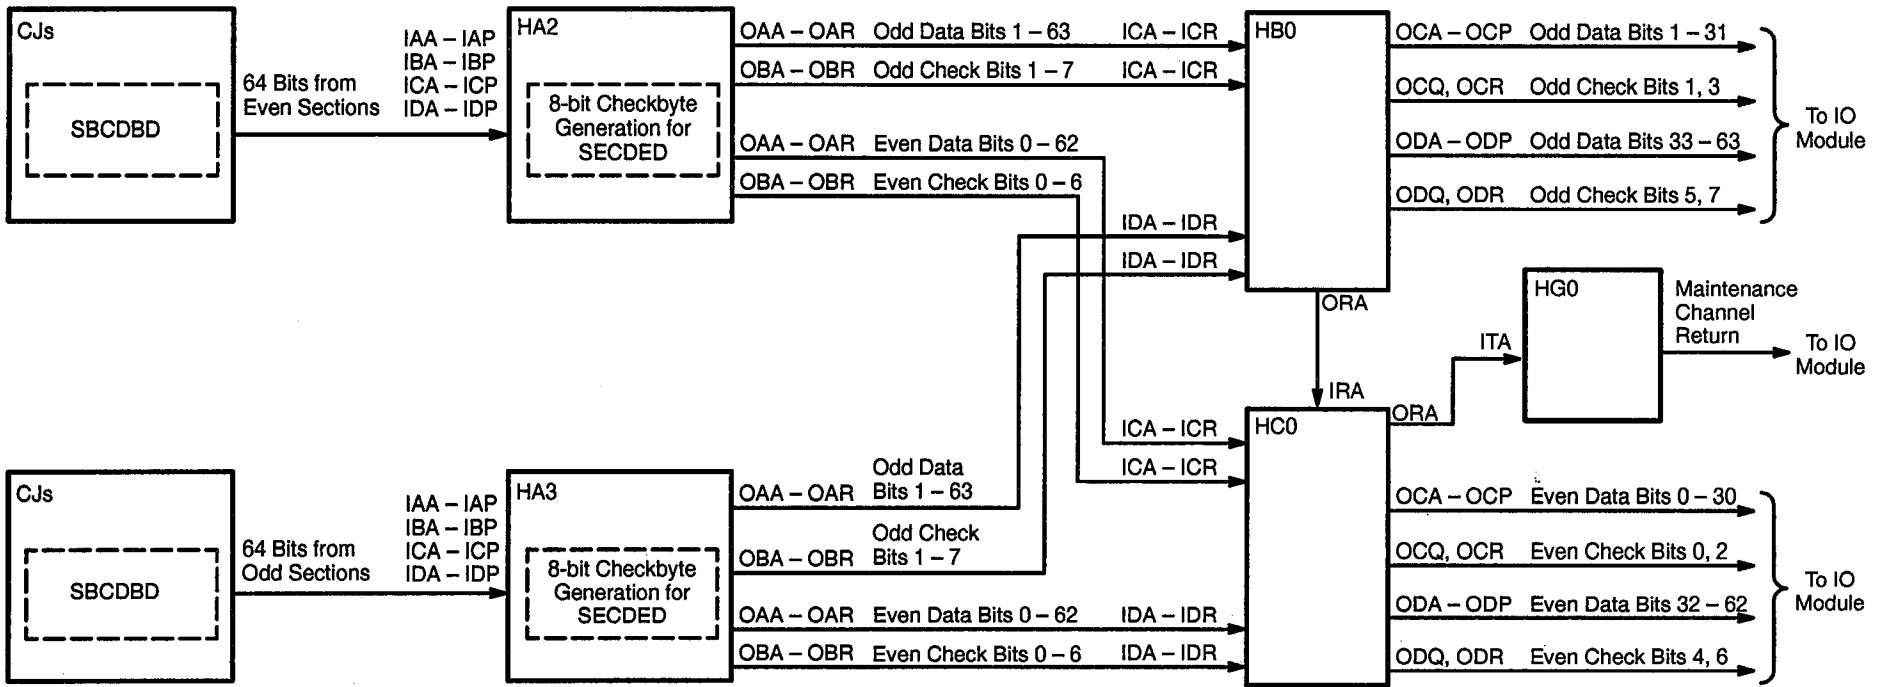

NOTE: The terms OAA, OAC, OAE, etc., go to the HB0 option.
 The terms OAB, OAD, OAF, etc., go to the HC0 option.
 The terms OBA, OBC, OBE, etc., go to the HB0 option.
 The terms OBB, OBD, OBF, etc., go to the HC0 option.

Figure 20. CPU Options – Read (Memory to IO)

I/O Logic on Shared Module

All I/O channel request information follows a path from the issuing CPU, to the local shared module, and finally to the IO module through the CPU that is connected to the IO module that services the requested channel, as shown in Figure 21. If the local shared module determines that the requested channel is on the other physical half of the chassis, it forwards the channel request to the remote shared module. The remote shared module then sends the information to the appropriate CPU module on that half of the chassis.

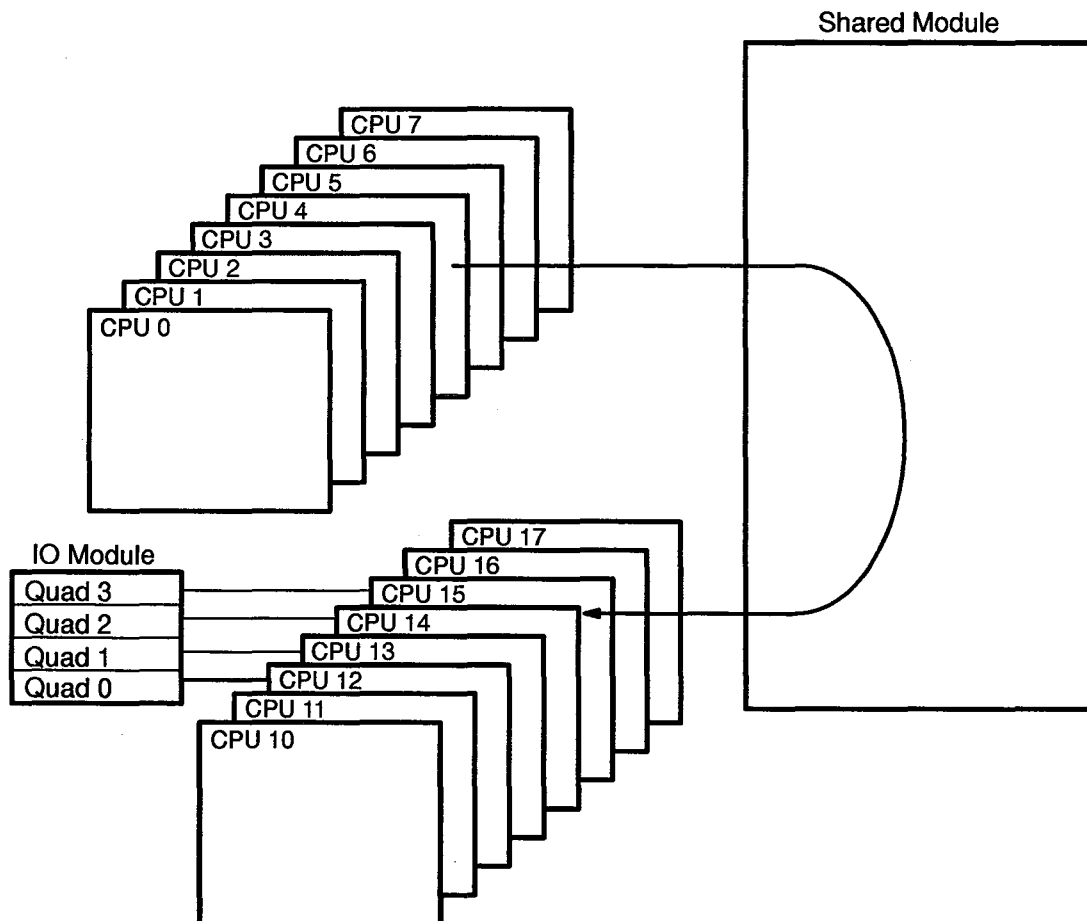


Figure 21. Channel Request Information Flow

Acronyms

The engineering documentation uses several acronyms to identify signals and commands used in the shared module. The following list defines these acronyms. Not all of these are used for an I/O instruction.

- CCMD - CPU shared command
- CMD - shared command
- SPTR - steering pointer
- RPTR - register pointer
- SCPU - source CPU
- DCPU - destination CPU
- EDCPU - effective destination CPU (from channel number)
- ECLN - effective CLN (from CLN+partition)
- MM/UM - monitor mode/user mode
- T&S - test and set
- DLI - deadlock interrupt

Shared Module Ports

The shared module is divided into ports, and the ports are then grouped. There are 16 ports on each shared module, one for each of the 16 CPUs that connect to it. The ports are numbered in octal. Each port contains both an SA and an SB option. The ports are divided into four groups for the passing of information and data. Group 0 contains ports 10, 0, 11, and 1; Group 1 contains ports 12, 2, 13, and 3; Group 2 contains ports 14, 4, 15, and 5; and Group 3 contains ports 16, 6, 17, and 7.

Figure 22 shows the grouping of the ports within the shared module. Group 0 is expanded in the diagram to show the data and command flow from each port within the group to the other ports within that group.

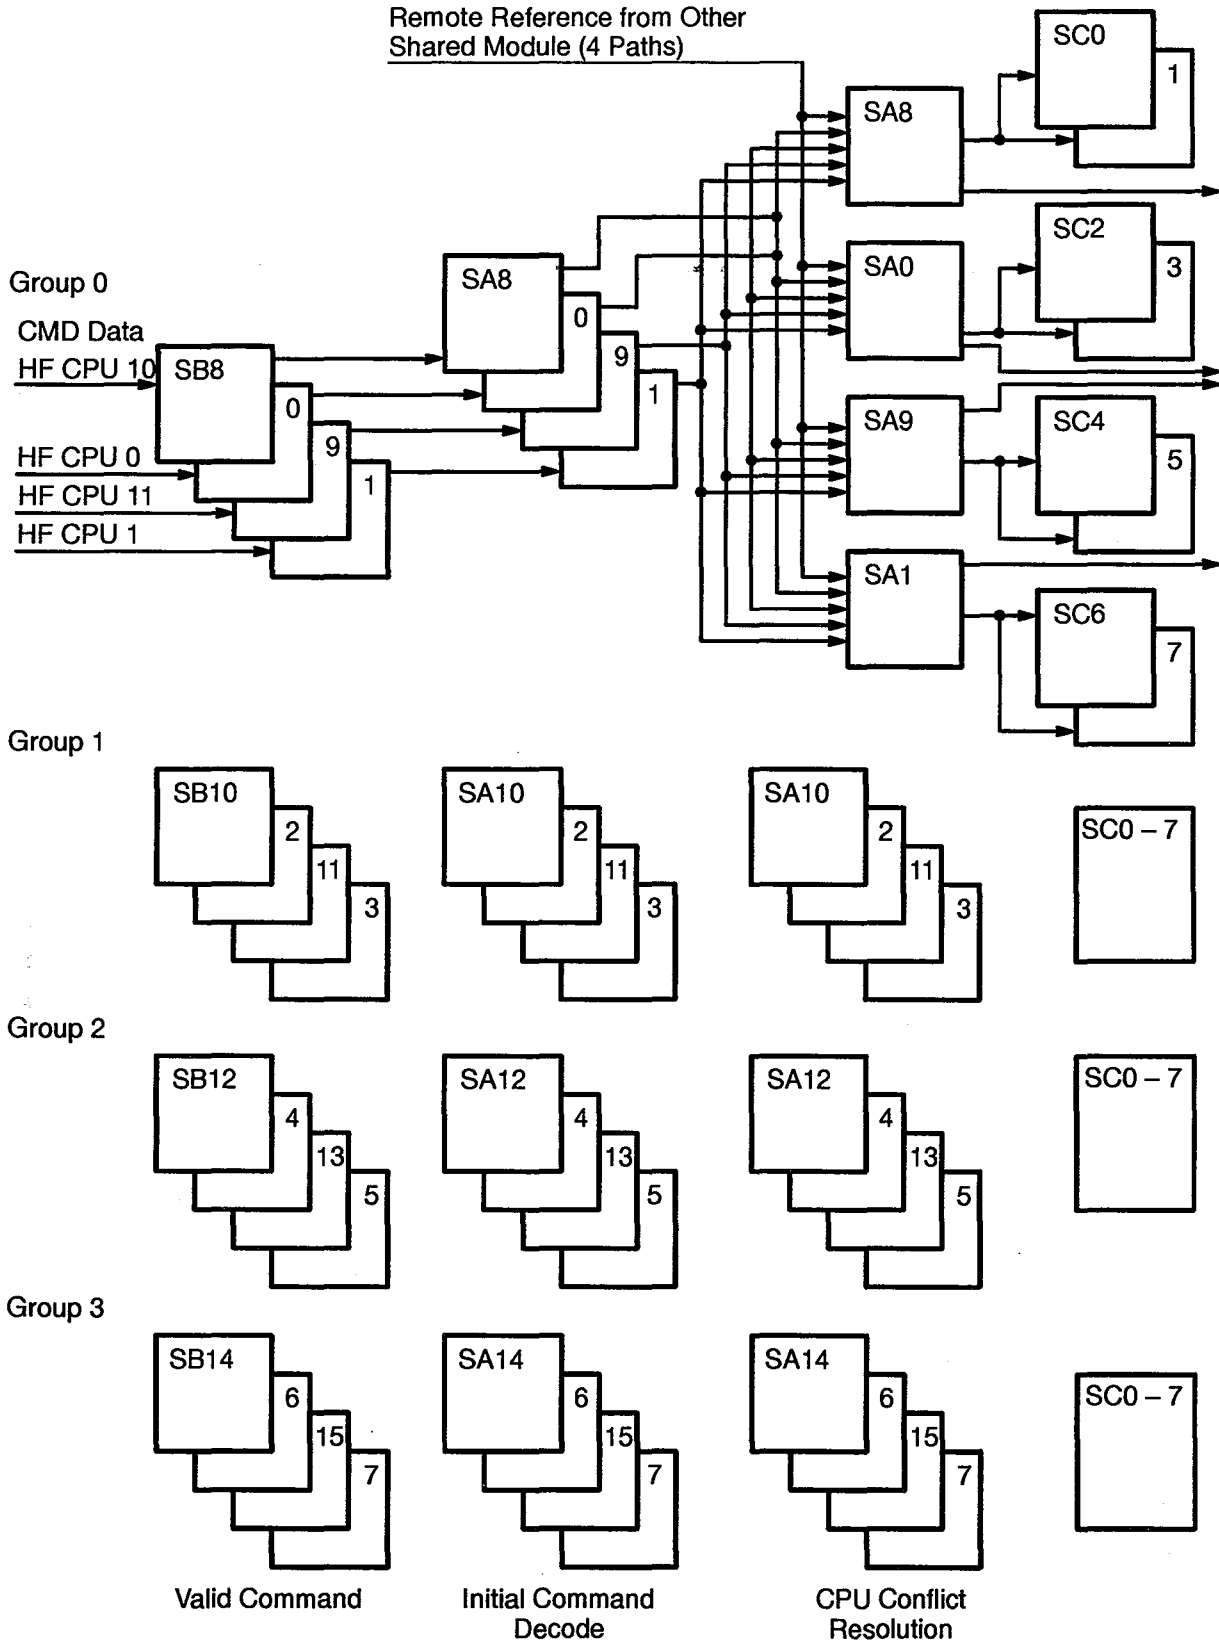


Figure 22. Shared Module Port/Group Designation

Shared Module Options

The following paragraphs describe the shared module options that are involved in I/O activity.

SA Option

There are 16 SA options, numbered SA00 through SA15, on the shared module. The SA option is one of two options that make up the 16 ports located on the module. This option decodes the channel number requested during an I/O instruction and generates the effective destination CPU (EDCPU) code and the steering pointer (SPTR) code.

SB Option

There are 16 SB options located on the shared module, which are numbered SB00 through SB15. The SB option is the second of two options that make up the 16 ports located on the module. The SB option passes data and command information to the CPU that will service the I/O channel request.

The SB option receives the initial command code for an I/O request and, once the code is validated, sends the information to the SA option.

SC Option

There are 8 SC options used within the shared module, SC0 through SC7. The SC option performs functions related to channel interrupts and the real-time clock (RTC). During an I/O request, the SC option routes data to the SD option.

Channel interrupt and the SIE scoreboard are held in SC00. SC00 synchronizes RTC broadcasts with the remote shared module.

SD Option

There are 16 SD options on the shared module, numbered SD00 through SD16. The SD option routes data and command information to the CPU port that services the I/O request. Data and command information is routed to the correct port via the steering pointer code generated on the SA option.

Shared Command Codes

The shared module routes information with command codes. When the CPU decodes an I/O instruction, it generates a command code that is specific to that instruction. Table 12 lists the command codes generated for each I/O instruction.

Codes 50, 51, and 52 are shared module responses to a CPU. Codes 65, 66 and 67 are used internally on the shared module. Command 64 is generated on the CPU and sent to the shared module.

Table 12. Shared Command Codes

Command Code	Instruction	Description
c11	0010 <i>jk</i>	Set channel address register
c12	0011 <i>jk</i>	Set channel limit register
c14	0012 <i>j0</i>	Clear I/O interrupt Clear error flag Clear device MC (output channel only) Enable channel interrupt
c15	0012 <i>j1</i>	Clear I/O interrupt Clear error flag Set device MC (output channel only) Clear ready held (input channel only) Enable channel interrupts
c16	0012 <i>j2</i>	Disable channel interrupt
c17	0012 <i>j3</i>	Enable channel interrupts
c20	033 <i>i00</i> 033 <i>ij0</i>	Read lowest interrupting channel to <i>A_i</i> Read channel address from channel to <i>A_i</i>
c21	033 <i>ij1</i>	Read error from channel
c50		Route I/O request from source CPU (SCPU) to effective destination CPU (EDCPU) where channel is held
c51	c20, c21	Same as 50 except start destination SB 033 timer
c52	c14, c15	Same as 50 except start destination SB 033 timer
c60	IO respond	Route to SCPU in RPTR to respond to 033 request
c64	Set IO interrupt	I/O interrupt to shared scoreboard SC0
c65	Clear IO interrupt	Clear I/O interrupt channel in partition
c66	PINT	Broadcast to all CPU PINT
c67	MCU	Broadcast to all CPU MCU

I/O Command Flow through Shared Module

The following pages describe the sequence that occurs during a typical I/O reference. The HF option in the issuing CPU generates the command code from the I/O instruction. The HF option passes the command code, along with the contents of A_j and A_k , to an SB option on the shared module. If the SB option has received a Valid CPU Command signal from the SA option (indicating the presence of sanity), then the command code and the contents of A_j and A_k are sent to the SA. Figure 23 illustrates this flow.

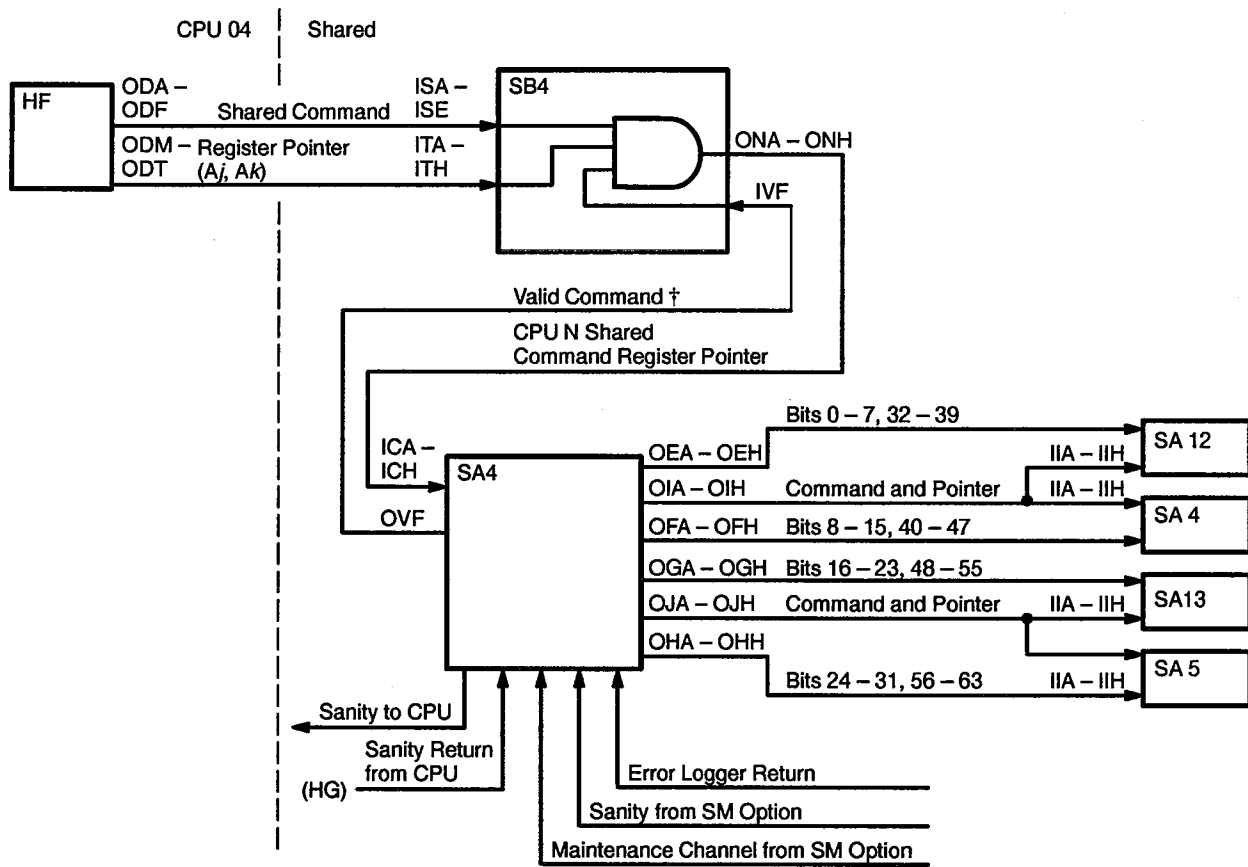


Figure 23. CPU-to-Shared Module Initial Data Flow

The SA options resolve any conflicts among the CPUs, IO, and remote shared access within the group. The SA options can hold three reference requests. Figure 24 illustrates the conflict resolution in the SA option.

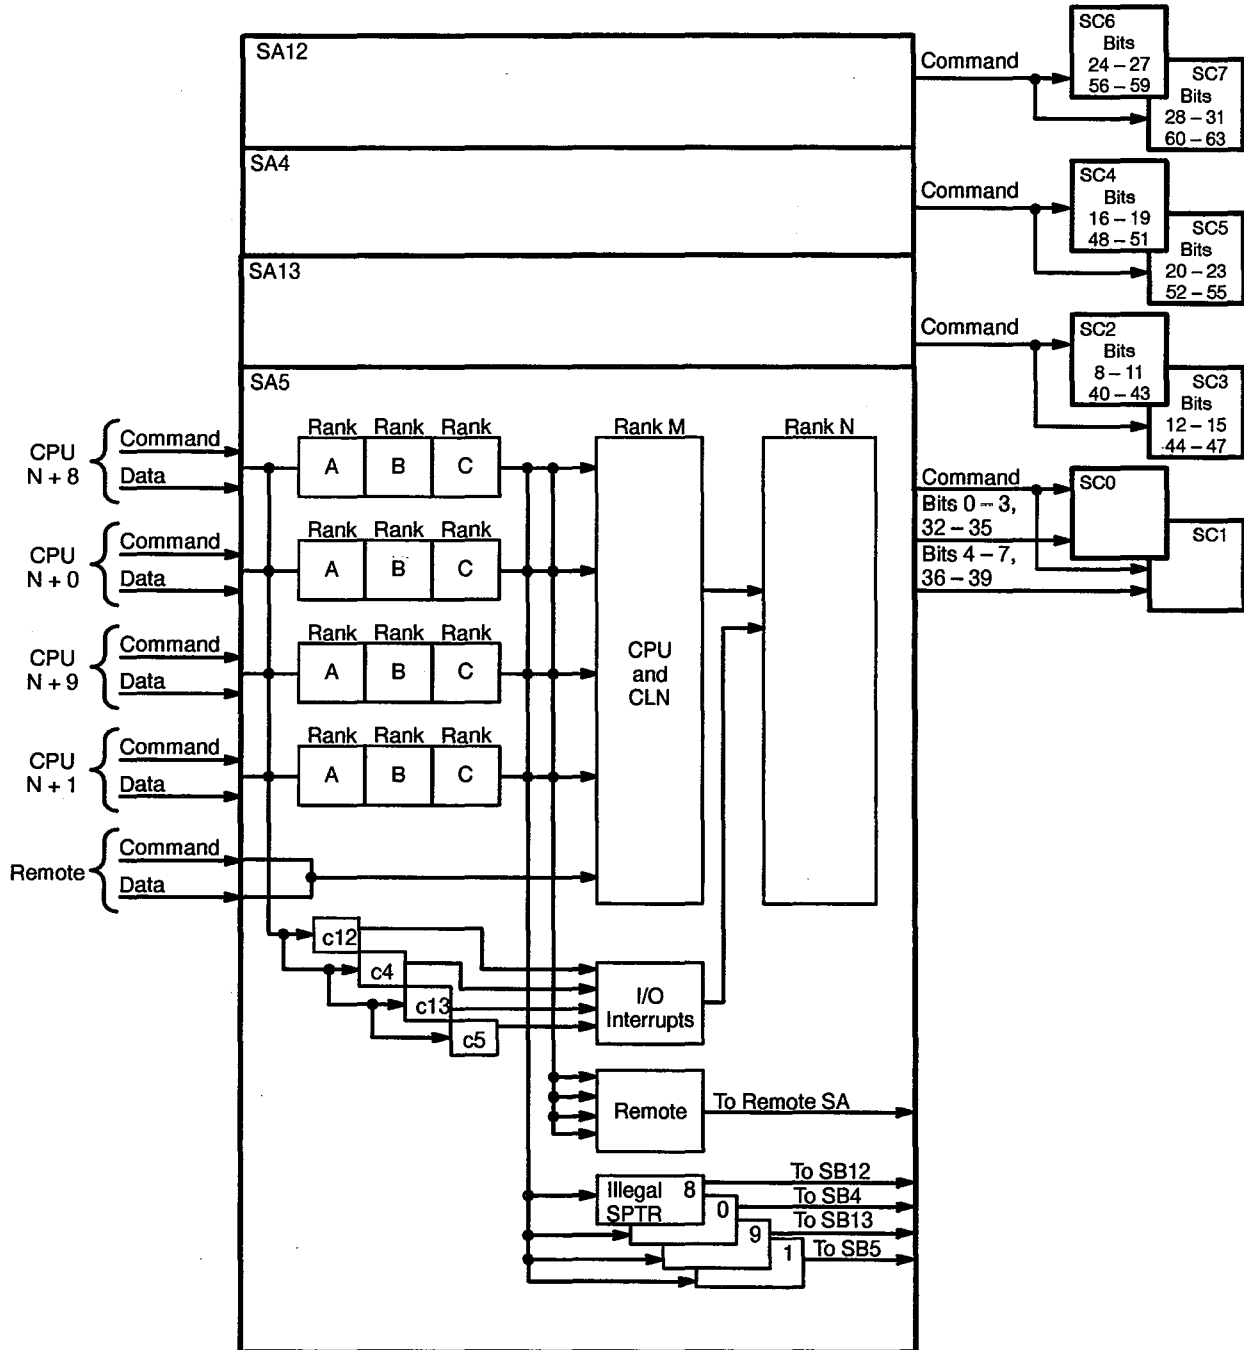


Figure 24. SA Option Conflict Resolution

The SA option also decodes the channel number and generates the effective destination CPU (EDCPU) code. This code is used to create a steering pointer (SPTR). The steering pointer allows the shared module to pass the data to the correct port for the CPU that services the I/O request.

The SC options send the data to the SD options, which steer the information to the appropriate port (SB options) for the destination CPU. The SB options send the information to the destination CPU in two 32-bit transfers. Figure 25 illustrates the format of data in this transfer.

CPU # (SCPU) 8 Bits	Group # 2 Bits	Command 6 Bits	A _j 8 Bits	A _k 40 Bits
---------------------------	-------------------	-------------------	--------------------------	---------------------------

Figure 25. Data Format for Shared Module-to-CPU Transfers

On the CPU, the HF option reassembles the information into four 16-bit packets and sends it to the HC option, along with the Go I/O Command signal. The HC option is basically a pass-through option that passes the data to the DC option in the IO module.

I/O Sequence

This last section details the events that occur during a typical I/O sequence. The example shows the required resources and the sequence of events that occur when a user program requests a file from disk. The circled numbers in Figure 26 through Figure 31 correspond to the numbered steps in the following text.

For the example, assume that the following configuration is in place: A CRAY T916 chassis with 16 CPUs, one shared module, two IO modules, and the IOS configuration that is shown in Figure 32.

1. In this example, a user program running in CPU 14 requests a file that resides on disk. The user program exchanges out of the CPU with a normal exit instruction, and the kernel exchanges into the CPU. The kernel determines that the requested file is on a disk connected to IOS cluster 2. Therefore, it will select a LOASP channel number that is connected to IOS cluster 2 to pass the file request; in this example, channel 105.

The kernel writes a disk read request packet into memory that will be transferred over the LOASP channel to the IOS.

The CPU executes the following monitor mode instructions to initiate the LOASP channel:

```
0012j0 clears channel Aj
0011jk sets channel Aj's CL to Ak
0010jk sets channel Aj's CA to Ak, starting the LOASP transfer
```

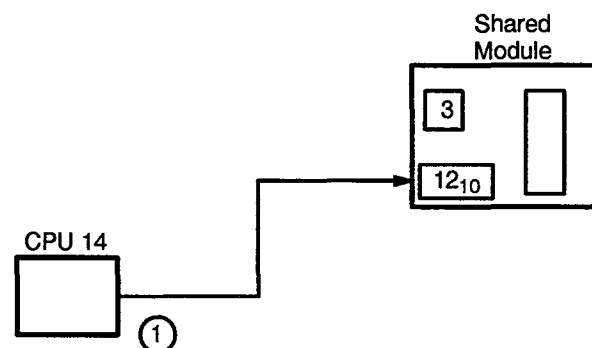


Figure 26. CPU 14 Requests Channel 105 from the Shared Module

As the CPU decodes each I/O instruction, it generates a command code, which it sends to the local shared module, along with A_j and A_k .

2. The shared module first determines the quadrant of the IO module and the CPU to which the requested channel is connected. It then attaches the effective destination CPU number and the I/O group number to the command code and the A_j and A_k values that came from the issuing CPU, and sends them through the CPU that is connected to that quadrant. The pass-through CPU forwards this on to quadrant 1 of the IO module.

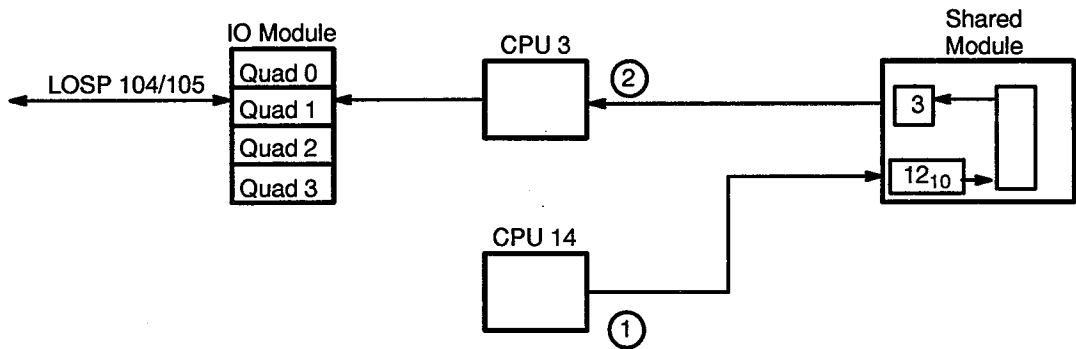


Figure 27. Shared Module Sends Request to the IO Module

3. The IO module then reads the disk request packet from mainframe memory and sends it to cluster 2 of the IOS through LOSP channel 105.

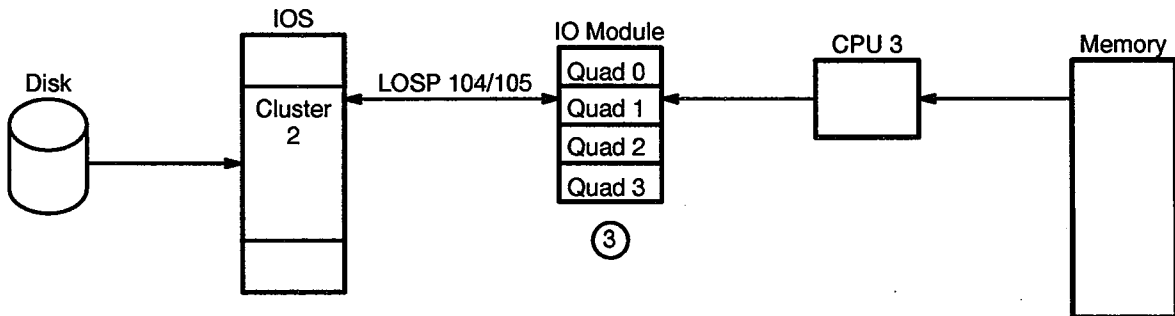


Figure 28. Channel 104 Sending Disk Request Packet to the IOS through CPU 3

The IOS, in turn, reads the file from the disk and places it on the buffer board of cluster 2.

- The disk data is then transferred to mainframe memory through HISP channel 402. This operation is controlled by the IOS and requires no mainframe shared/CPU module decision on which path to take into memory. The mainframe has no way of detecting when the HISP transfer has completed.

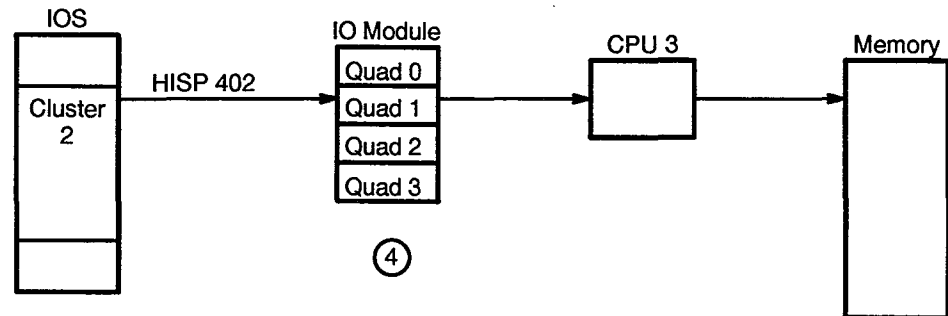


Figure 29. HISP Transfer from IOS to Mainframe

- The IOS detects that the HISP transfer has completed, and it then writes a packet of information in mainframe memory through the LOSP channel. The IO module through which the packet is written detects that this transfer has completed and sends an interrupt to the shared module.

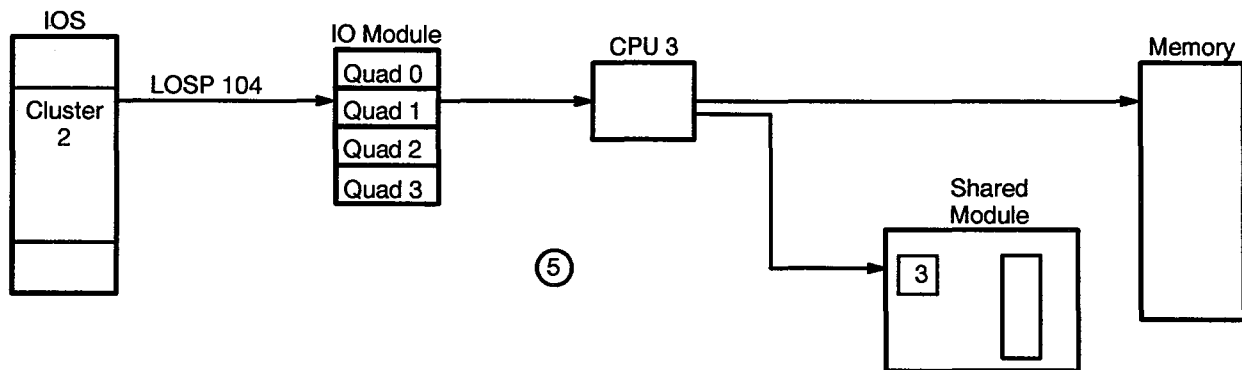


Figure 30. LOSP Transfer from the IOS to Mainframe Memory

6. The I/O interrupt is recorded in an interrupt scoreboard on the shared module. There is one scoreboard per I/O group, with a maximum of four groups. When a group has one or more interrupts pending, a token is placed into a ring that has a node for each CPU in the group. A token will be placed in the ring only if the SIE bit for the group is set. This indicates that a CPU in the group is not already servicing an I/O interrupt. An I/O group can service only one interrupt at a time.

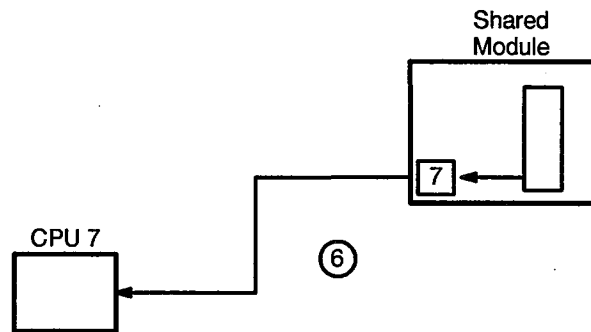


Figure 31. CPU 7 is Interrupted

The token is compared at each node with the CPU's group number and process state. If the examined node does not fit the requirements for accepting an I/O interrupt, the token is advanced to the next node. The first CPU in the ring that meets these requirements is interrupted.

These requirements are:
 EIM is set
 IOI in the mode register is set

In this case, CPU 7 meets these requirements.

7. The user process running in CPU 7 exchanges out of the CPU and the kernel exchanges in. The operating system wakes up the original process that originated the disk request and puts it into a queue. When the job is at the top of the queue, it rolls into a CPU and continues processing.

In order for the above process to occur, the following conditions must be met:

- The I/O handling CPU (CPU 3) must be enabled to pass I/O.
- The requesting CPU (CPU 14) must be enabled to originate I/O.

- The requesting CPU (CPU 14) and the interrupt handling CPU (CPU 7) must be in the same I/O group as LO SP channel 104/105.
- The requesting CPU (CPU 14) must have shared access.

These conditions are parameters that are set up under the System Configuration Environment (SCE).

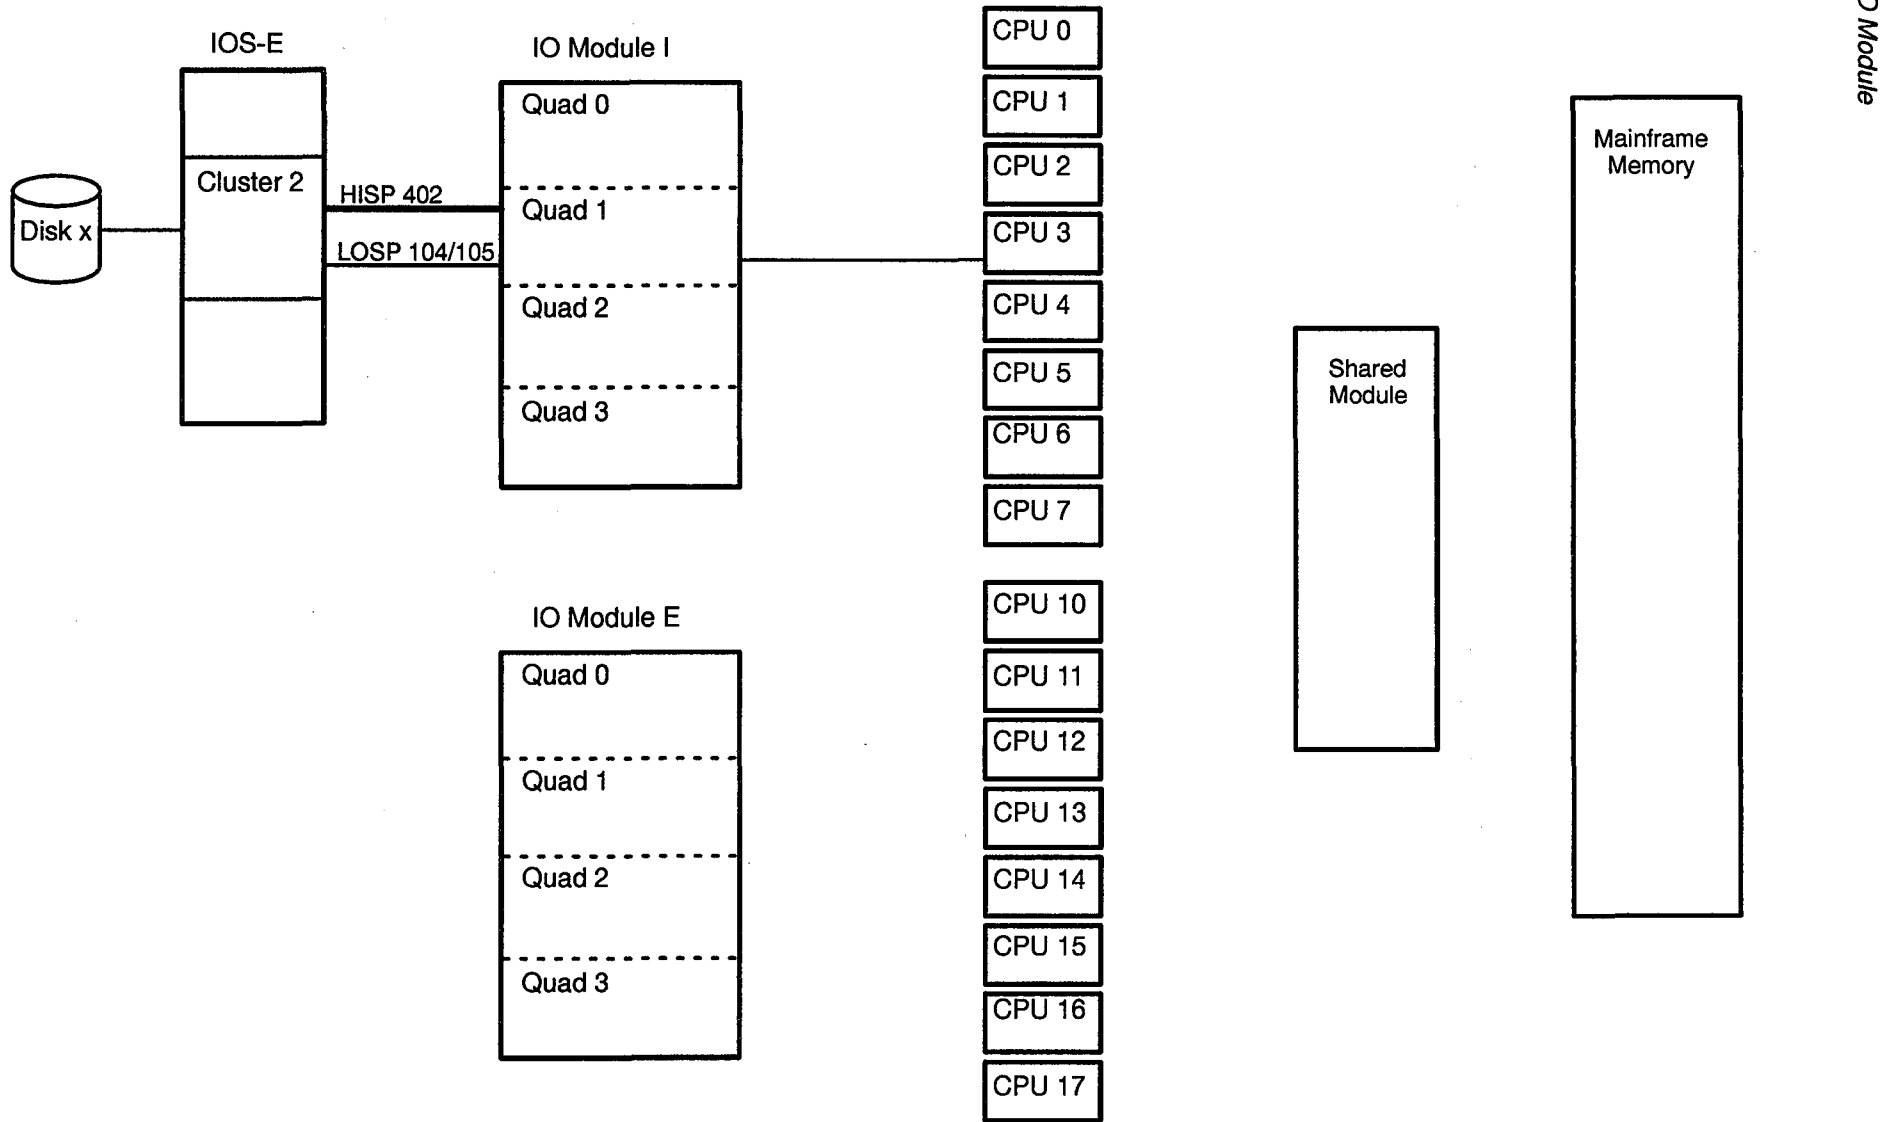


Figure 32. Example System Configuration

Reader Comment Form

Title: **Input/Output Module (IO01)**
(CRAY T90™ Series)

Number: **HTM-030-B**

Your feedback on this publication will help us provide better documentation in the future. Please take a moment to answer the few questions below.

For what purpose did you primarily use this document?

Troubleshooting Tutorial or introduction
 Reference information Classroom use
 Other - please explain _____

Using a scale from 1 (poor) to 10 (excellent), please rate this document on the following criteria and explain your ratings:

Accuracy _____
 Organization _____
 Readability _____
 Physical qualities (binding, printing, page layout) _____
 Amount of diagrams and photos _____
 Quality of diagrams and photos _____

Completeness (Check one and explain your answer)

Too much information Too little information Correct amount

You may write additional comments in the space below and mail them to the address on the back of this form, or fax them to us at 715-726-4353. You may also E-mail your comments to us at hpt@cray.com. When possible, please give specific page and paragraph references. We will respond to your comments in writing within 48 hours.

NAME _____
JOB TITLE _____
E-MAIL ADDRESS _____
SITE/LOCATION _____
TELEPHONE _____
DATE _____

[or attach your business card]




CUT ALONG THIS LINE

Fold



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

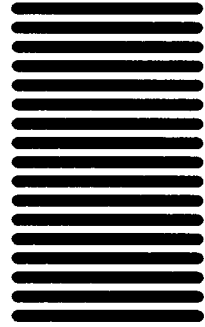

BUSINESS REPLY CARD
FIRST CLASS PERMIT NO 6184 ST. PAUL, MN
POSTAGE WILL BE PAID BY ADDRESSEE



**Attn: Hardware Publications and Training
890 Industrial Boulevard
Chippewa Falls, WI 54729**

Fold

STAPLE