

# DSS-1 and DSS-2 Maintenance

HMM-199-0.1

Scalable I/O Architecture

Last Modified: February 1998

Record of Revision .....	3
Product Overview .....	3
Functional Description .....	3
Physical Description .....	4
DSS-1 Enclosure .....	4
Enclosure Switches and Indicators .....	7
Disk Drive (DD-314, DD-318, and RD-318) .....	7
Power Supply .....	10
Controllers .....	11
MPN Controller (SCS-10) .....	11
CRAY J916 and CRAY J932 Controller (SI-3) .....	11
Equipment Specifications .....	12
Cabling Guidelines .....	13
Power Cable .....	13
DSS-1 I/O Cable .....	13
DSS-1 WACS Cable .....	14
Internal I/O Cable .....	15
Device Power Connector .....	15
Device Configuration Jumpers .....	16
Device ID Connector .....	16
Configuration Guidelines .....	17
Installation Reference .....	18
Troubleshooting Reference .....	18
Field Replacement Procedures (FRPs) Reference .....	18

## Figures

---

Figure 1.	DSS-1 Block Diagram .....	4
Figure 2.	DSS-1 Enclosure .....	5
Figure 3.	Disk Drive Locations .....	5
Figure 4.	DSS-1 Layout .....	6
Figure 5.	Enclosure LEDs and Drive ID Switch .....	7
Figure 6.	DSS-1 Disk Drive Front Panel .....	8
Figure 7.	DSS-1 Disk Drive (Removed from Canister) .....	9
Figure 8.	DSS-1 Power Supplies .....	10
Figure 9.	Internal I/O Cable .....	15
Figure 10.	Device Configuration Jumpers .....	16

## Tables

---

Table 1.	DSS-1 Equipment Specifications .....	12
Table 2.	DSS-1 SCSI-2 Connector Pinout .....	13
Table 3.	WACS Connector Pinout .....	14
Table 4.	Disk Drive Power Connector Pinout .....	15
Table 5.	Drive ID Connector Pinout .....	16

## Record of Revision

---

### August 1996

Original printing.

### February 1998: 0.1

This revision removes field replacement and installation procedures and adds references to *PC-10 Field Replacement Procedures* and *DSS-1/DSS-2 Hardware Upgrade Procedure*.

## Product Overview

---


The DSS-1 disk subsystem provides up to 75 Gbytes of data storage in a compact, rack-mounted peripheral enclosure. The enclosure contains up to eight 3.5-in. hard disk drives with two separate, common power supplies. Both the drives and the power supplies may be replaced during normal system operation, which provides a high degree of equipment resiliency.

The DSS-2 is functionally identical to the DSS-1. The only difference is that the connectors for the disk drives have a high insertion-cycle rating to enable media storage between accesses. Disk drive canisters also have high insertion-cycle connector ratings and the drives are designated RD-318 (equivalent to the DD-318). RD-318 drives are not interchangeable with DD-314 and DD-318 drives. All references in this document to the DSS-1 apply equally to the DSS-2.

## Functional Description

[Figure 1](#) provides a functional block diagram of the DSS-1. An I/O cable connects each pair of DSS-1 disk drives to an I/O channel connector, in either a CRAY J90 series system or a multipurpose node (MPN-1) interface on a Cray Research GigaRing I/O channel. The interface protocol is the small computer system interface (SCSI-2) wide/fast differential standard protocol.

Figure 1. DSS-1 Block Diagram

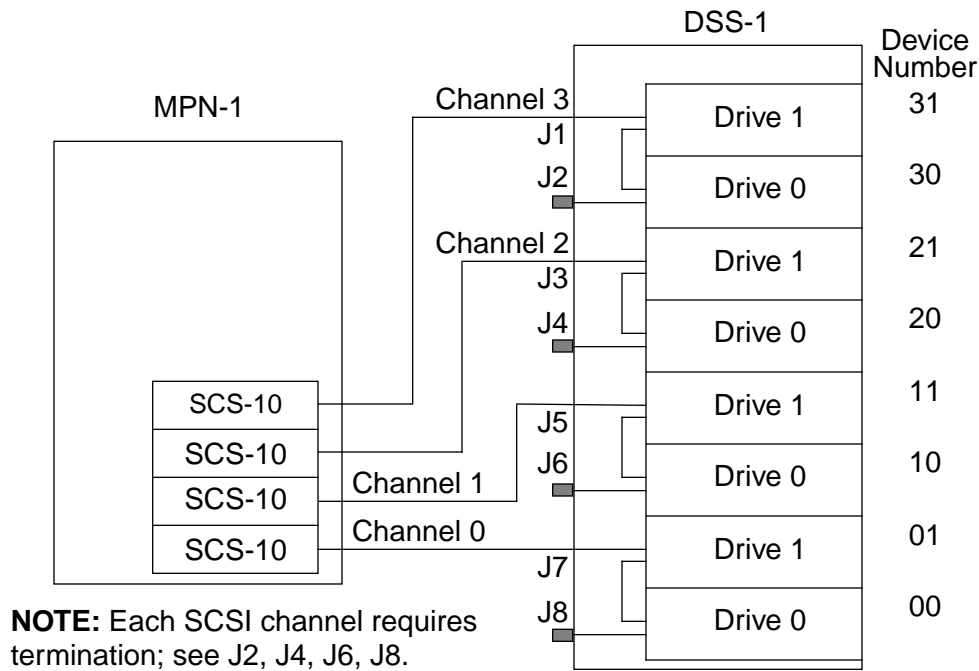

An SI-3 controller provides the interface from the DSS-1 to a CRAY J90 series system; an SCS-10 controller in the MPN-1 provides the interface to a GigaRing channel.

Drive pairs may be daisy-chained (in increments of 2) for greater channel capacity at the expense of individual channel accessibility. A terminator must be plugged onto the back panel of the DSS-1 enclosure to terminate each channel.

## Physical Description

The DSS-1 is a 4-SU (7-in. high) enclosure that contains disk drives in removable canisters, redundant power supplies, and connectors for data cables and subsystem status cables.

### DSS-1 Enclosure

The DSS-1 enclosure, shown in [Figure 2](#), can contain a maximum of eight field replaceable SCSI-2 Fast/Wide differential disk drives. The enclosure also contains two power supplies, two cooling fans, internal SCSI cables, a warning and control system (WACS) interface printed circuit board (PCB), and a backplane PCB; all are field replaceable units (FRUs).

Figure 2. DSS-1 Enclosure

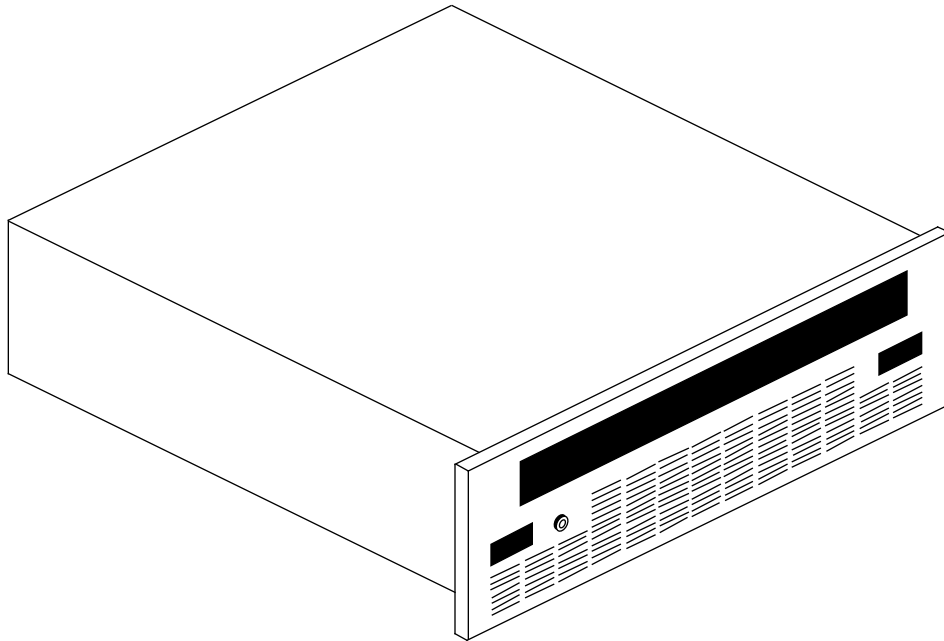


Figure 3 shows the DSS-1 front panel opened for access to the disk drives. The front panel has two latches that release (when unlocked) to allow the front panel to open and swing down. (Figure 8 shows the rear panel of the DSS-1.)

Figure 3. Disk Drive Locations


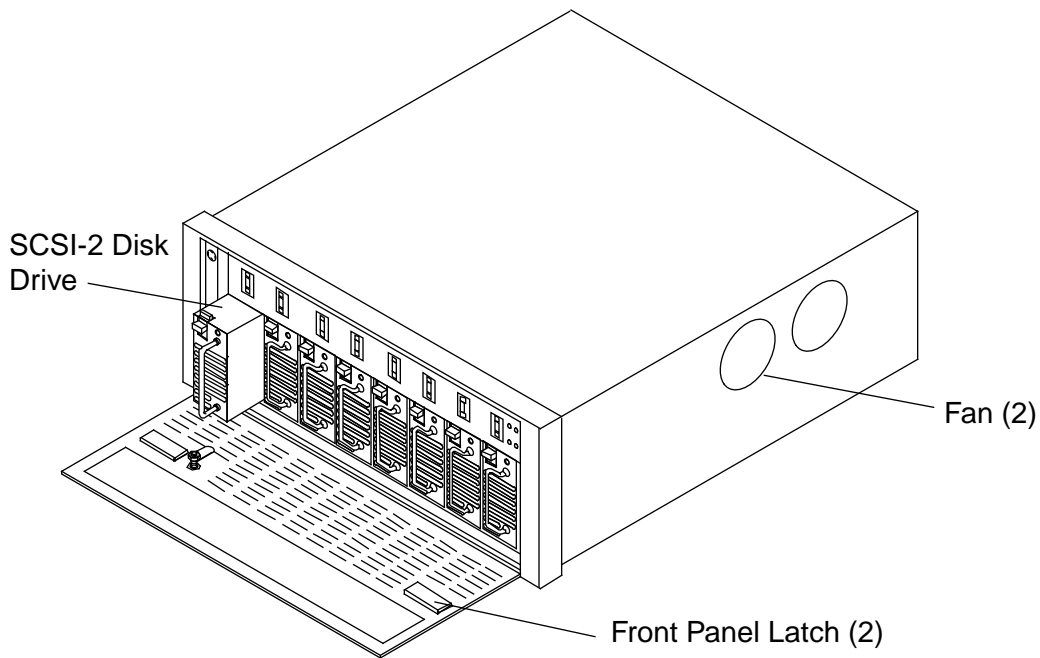


Figure 4 shows a top-down view of the contents of the DSS-1 enclosure with the top panel removed. The backplane PCB distributes DC power to all drives and to the two fans.

The WACS PCB in the DSS-1 accumulates power supply and fan status signals and reports them to the warning and control system (WACS) in the PC-10 cabinet. During power-up operation, the backplane sequences power to the drives to minimize power supply surge currents.


Figure 4. DSS-1 Layout

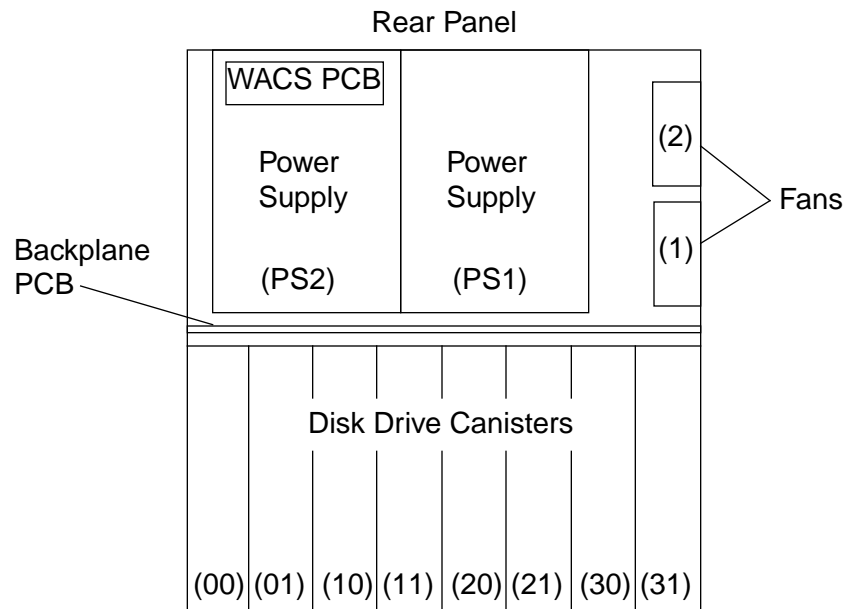

## Enclosure Switches and Indicators

A device ID switch above each drive identifies the drive with a unique device number that ranges from 0 through 15 (IDs 7 and 15 are typically reserved for the SCS-10 controller). The switch displays the selected number, as shown in [Figure 5](#).

*Figure 5. Enclosure LEDs and Drive ID Switch*

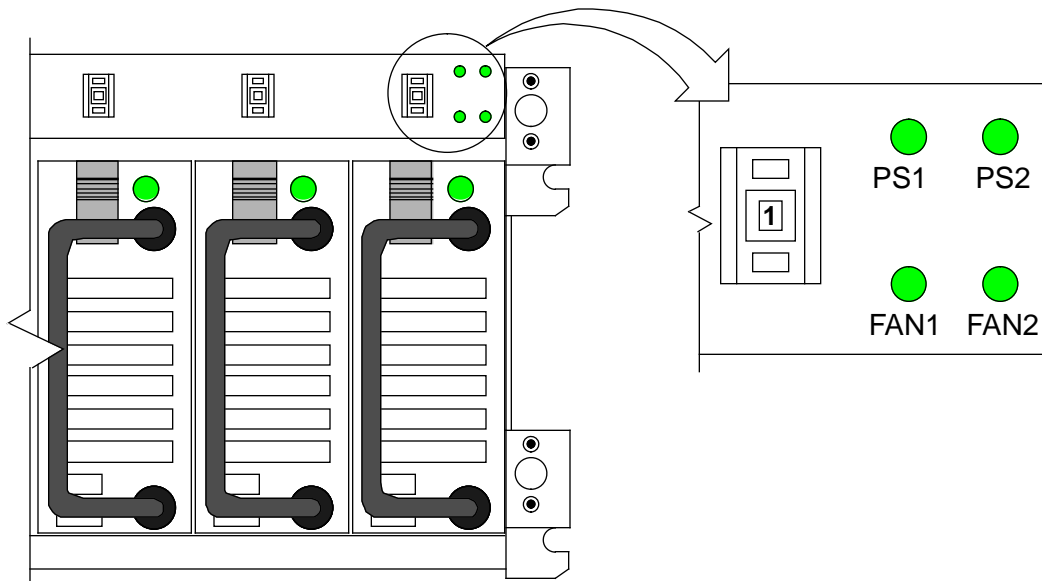


Two bicolor LEDs (PS1 and PS2), on the upper-right corner of the front panel, display the status of the two power supplies. Each indicator is green when its power supply is operating properly and red when a power supply fault occurs.

Two bicolor LEDs (FAN1 and FAN2), next to the power supply status indicators, display the status of the two cooling fans on the right side of the enclosure. Each indicator is green when its fan is operating properly and red when a fan fault occurs.

## Disk Drive (DD-314, DD-318, and RD-318)

Each DSS-1 disk drive is mounted in a canister that plugs into the enclosure. [Figure 6](#) shows the front panel of the disk drive in its canister. DSS-1 drives are available with either 4.5-Gbyte (the DD-314) or 9.4-Gbyte (the DD-318) capacities. DSS-2 drives are available with 9.4-Gbyte (the RD-318) capacity. (These drives are not part of the original DD-300 series of IPI disk drives.)

Figure 6. DSS-1 Disk Drive Front Panel

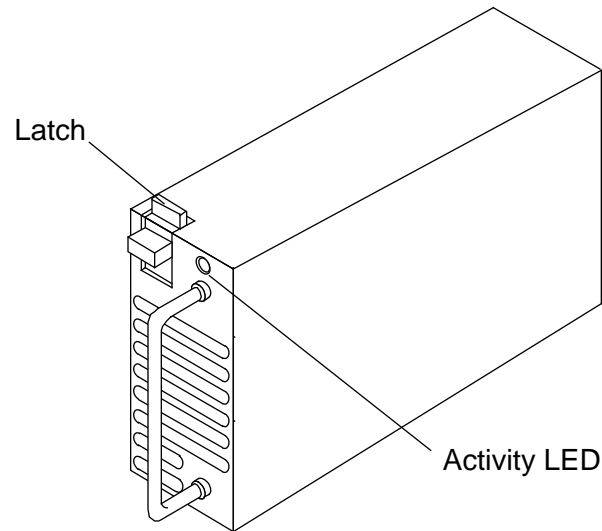**CAUTION**

**The disk drive is susceptible to mechanical damage if improperly handled. Observe handling and packing precautions provided with the DSS-1 and replacement disk drives.**

The front panel of the drive includes a swing-out, bail-style handle, a thumb-release latch, and a green activity status LED. The latch snaps into a slot in the enclosure and holds the drive securely. When installing the drive, make sure to push the drive firmly into the enclosure to seat the connector.

You must release the latch before you can pull the drive from the enclosure. During operation, the illuminated activity LED indicates that the drive is in the process of reading or writing data.


**NOTE:** You will lose data if you power down or unplug the drive while the activity LED is illuminated.

As shown in [Figure 7](#), the drive has a DC power connector, a drive ID connector, and a SCSI I/O connector on the rear panel. Cables within the disk drive canister plug into these connectors and carry data, control, and power between the drive and a 96-pin connector on the rear panel of the drive canister. This arrangement



enables automatic signal, power, and control connections during insertion and removal of the drive (in its canister) from the front of the enclosure. The “[Cabling Guidelines](#)” section, which begins on [page 13](#), lists all connector pinouts.

Figure 7. DSS-1 Disk Drive (Removed from Canister)

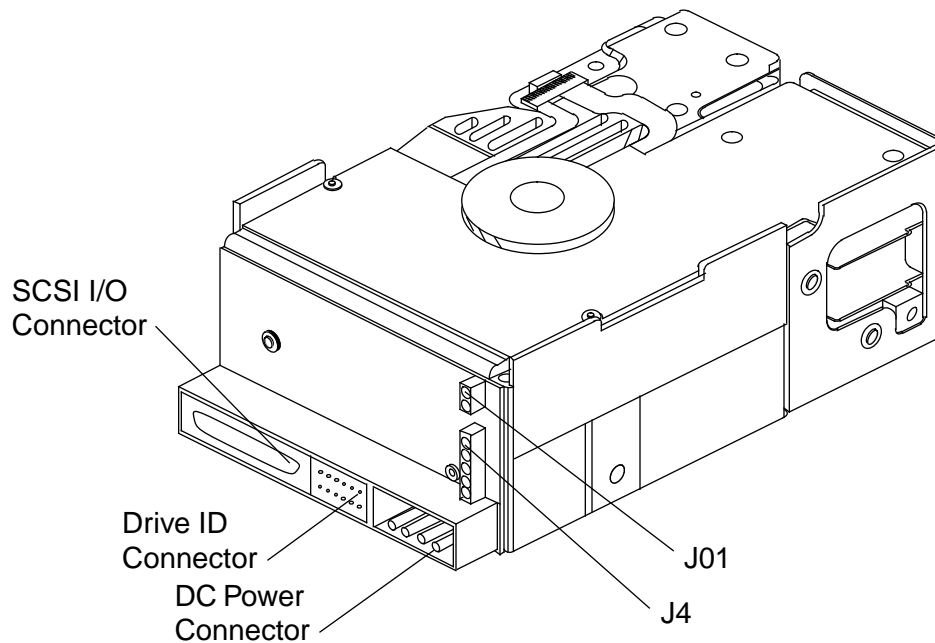

**NOTE:** The connector arrows point to pin number one on respective connectors.


Air drawn in through the enclosure front panel cools the drive. Power supply fans and enclosure fans create this air movement.

**NOTE:** Proper drive cooling requires adequate airflow. Never operate the DSS-1 without the enclosure top panel in place. Always cover any open drive slots in the enclosure front panel to avoid loss of airflow through operating disk drive canisters. Also, never block airflow through the front panels of either the enclosure or the disk drives.

## Power Supply

The two DSS-1 power supplies, shown in [Figure 8](#), are connected in parallel; each is capable of providing power for all drives within the enclosure. This redundant (N+1) configuration enables the disk drive subsystem to continue operating if one of its two power supplies fails and needs to be replaced.

Figure 8. DSS-1 Power Supplies

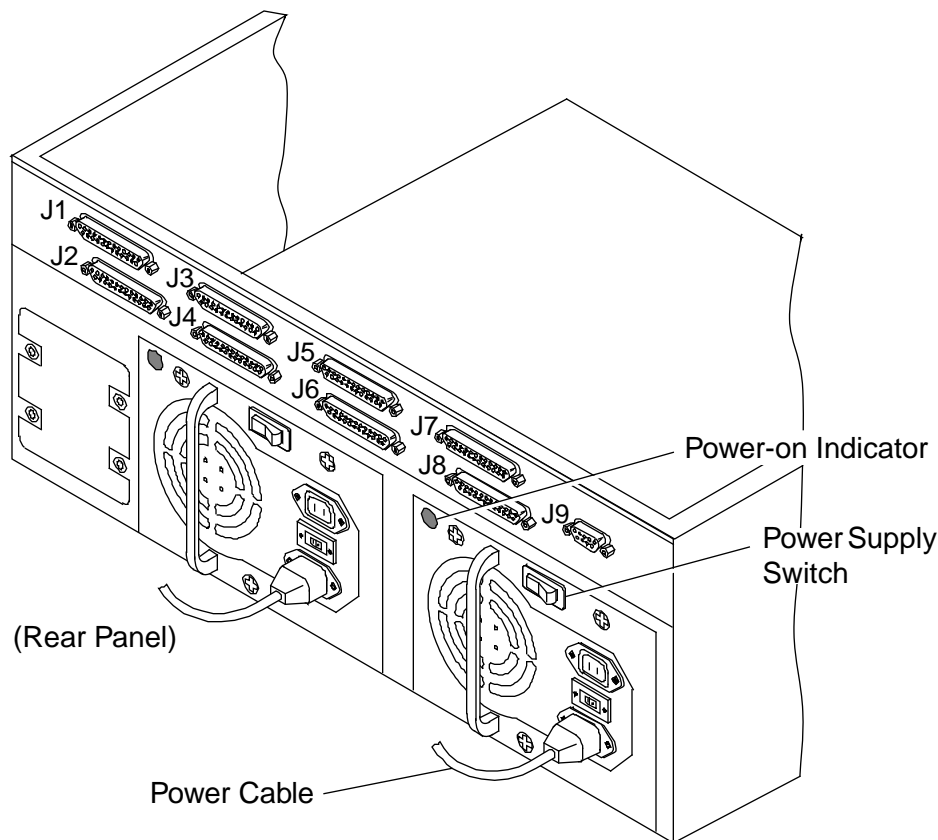

Each power supply has an ON/OFF power switch which is accessible from the rear of the enclosure. A green power-on indicator, which is part of the DDS-1 enclosure, indicates a functioning power supply.

Each power supply is *hot swappable*, which means that it may be turned off, unplugged, and replaced without affecting normal system operation. The only requirements for this feature are that the remaining power supply is functioning properly and that the replacement sequence does not result in the rear panel being open for more than a few seconds because of the constant airflow that is required for adequate drive cooling.

The power cable to the power supplies is a Y-configuration, which enables either power supply to operate in the absence of a power connection to the other. The upper, power-out daisy chain connector should not be used in the DSS-1.

## Controllers

The DSS-1 may be interfaced to either a computer system that uses a GigaRing channel for internal system communication or to a CRAY J90 series system. Each type of interface requires a different peripheral controller.

### MPN Controller (SCS-10)

The peripheral controller that interfaces the DSS-1 to the GigaRing channel is an SBus-based controller called the SCS-10, located in the MPN. The SCS-10 plugs into one of eight SBus slot connectors on the SBus peripheral interface (SPI) printed circuit board in the MPN. The SCS-10 provides a standard SCSI-2 protocol for transfer of 16-bit differential data to the disk drives. Each SCS-10 controller is a single-channel SCSI-2 controller that can provide an interface connection for up to 15 SCSI-2 devices. However, for optimum performance, each channel connects to only two drives, designated 0 and 1, as shown in [Figure 1](#).

### CRAY J916 and CRAY J932 Controller (SI-3)

A VME-based peripheral controller called the SI-3 interfaces the DSS-1 to a CRAY J90 series system. The SI-3 is located in the VME chassis. Each SI-3 supports two SCSI-2 channels. Each of these channels can provide an interface connection for up to 15 SCSI-2 devices. However, for optimum performance, each channel connects to only two drives in the DSS-1.

## Equipment Specifications

**Table 1** contains a list of physical, functional, and performance specifications for the disk subsystem and for each drive in the subsystem.

*Table 1. DSS-1 Equipment Specifications*

Parameter	Value	
DSS-1/DSS-2 specifications (installed in a PC-10 cabinet)		
Height	7.0 in. (19.1 cm) (4 SU)	
Width	22.25 in. (56.5 cm)	
Depth	23.0 in. (58.4 cm)	
Weight	90 lb (40.9 kg) maximum	
Power required	115 Vac, 4.0 Amp 230 Vac, 2.0 Amp 47 – 63 Hz	
Cooling required	1.1 kBtu/hr maximum	
Drive specifications (installed in a DSS-1/DSS-2 enclosure)		
	DD-314 Disk Drive	DD-318 Disk Drive RD-318 Disk Drive
Capacity (formatted in 4096-byte sections)	4509 Mbytes	9439 Mbytes
Logical block size (sector size)	4096 bytes	4096 bytes
Logical blocks	1,048,000	1,048,000
Read/write heads	20	20
Data cylinders	3711	5273
Tracks/surface	3711	5273
Bytes/surface	215 Mbytes	470 Mbytes
Sectors/track	12 - 18	16 - 27
Bytes/track	49,350 (minimum) 74,900 (maximum) 29 zones	78,540 (minimum) 122,173 (maximum) 7 zones
Rotational speed	7200 rpm	7200 rpm
Rotational latency	4.17 ms (average)	4.17 ms (average)
Seek time (average)	8 ms (read) 9 ms (write)	8.2 ms (read) 9.7 ms (write)
Track-to-track seek time	1.6 ms (read) 1.9 ms (write)	0.8 ms (read) 1.2 ms (write)
Full-stroke seek time	20.0 ms	20.2 ms
Sustained transfer rate	4.8 - 7.4 MBytes/s	8 - 12 MBytes/s
Data buffer (cache-usable)	954 Kbytes	1948 Kbytes

## Cabling Guidelines

### Power Cable

A Y-cable connects both power supplies to one power plug, which plugs into one of the power outlets of the PC-10 power distribution strip.

**NOTE:** Do not use the second, daisy-chain power connector on either power supply to provide power to any other equipment. Doing so will defeat the hot-swappable feature of the power supplies.

### DSS-1 I/O Cable

The I/O cable between the computer system and the DSS-1 rear panel I/O connector has a micro-D style, 68-pin male connector. [Table 2](#) describes the signals that the connector carries.

*Table 2. DSS-1 SCSI-2 Connector Pinout*

Pin No.	Signal Name	Pin No.	Signal Name
1	+DB12	35	-DB12
2	+DB13	36	-DB13
3	+DB14	37	-DB14
4	+DB15	38	-DB15
5	+DBP1	39	-DBP1
6	Ground	40	Ground
7	+DB0	41	-DB0
8	+DB1	42	-DB1
9	+DB2	43	-DB2
10	+DB3	44	-DB3
11	+DB4	45	-DB4
12	+DB5	46	-DB5
13	+DB6	47	-DB6
14	+DB7	48	-DB7
15	+DBP	49	-DBP
16	DIFFSENS	50	Ground
17	TERMPWR	51	TERMPWR
18	TERMPWR	52	TERMPWR
19	(Reserved)	53	(Reserved)
20	+ATN	54	-ATN
21	Ground	55	Ground

Table 2. DSS-1 SCSI-2 Connector Pinout (continued)

Pin No.	Signal Name	Pin No.	Signal Name
22	+BSY	56	-BSY
23	+ACK	57	-ACK
24	+RST	58	-RST
25	+MSG	59	-MSG
26	+SEL	60	-SEL
27	+C/D	61	-C/D
28	+REQ	62	-REQ
29	+I/O	63	-I/O
30	Ground	64	Ground
31	+DB8	65	-DB8
32	+DB9	66	-DB9
33	+DB10	67	-DB10
34	+DB11	68	-DB11

### DSS-1 WACS Cable

The status cable between the DSS-1 rear panel and the WACS carries the signals listed in [Table 3](#).


Table 3. WACS Connector Pinout

Pin No.	Signal Name	Pin No.	Signal Name
1	PS1 Good	6	Fan Return (Ground)
2	PS1 Return (Ground)	7	Install
3	PS2 Good	8	Install Return (Ground)
4	PS2 Return (Ground)	9	+5 Vdc (Power from WACS)
5	Fan Fault		

### Internal I/O Cable

Each of the disk drives has an I/O cable as shown in [Figure 9](#) that carries the signals inside the DSS-1 from the backplane PCB to the rear panel. The pinout matches the pinout listed in [Table 2](#).

*Figure 9. Internal I/O Cable*

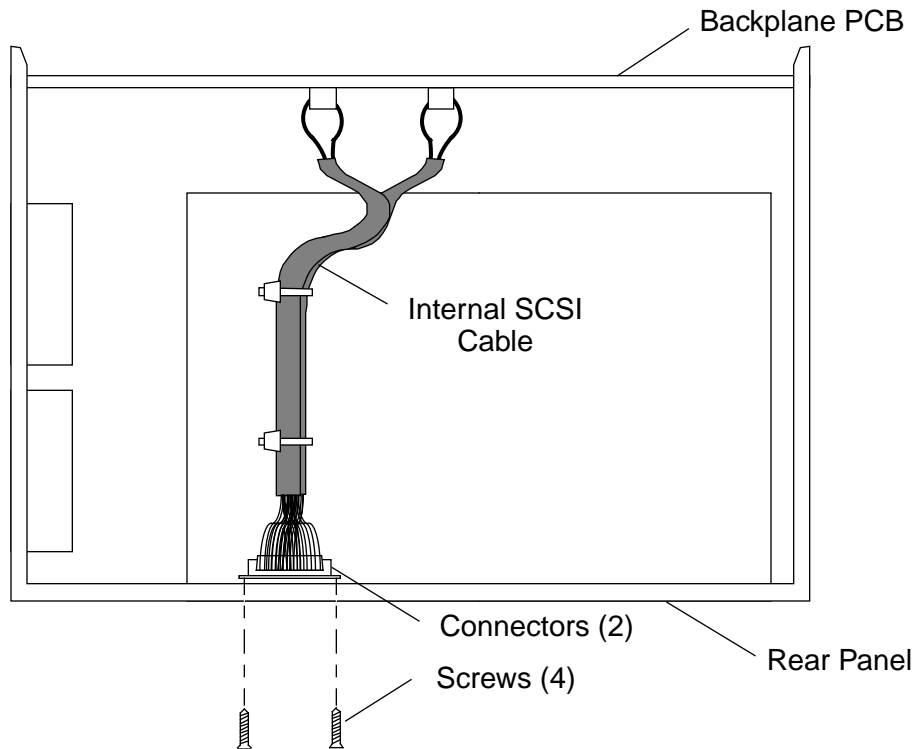

### Device Power Connector

The 4-pin power connector on the rear panel of each disk drive, inside the drive canister, provides connections for the voltages listed in [Table 4](#).


*Table 4. Disk Drive Power Connector Pinout*

Pin No.	Voltage
1	+12 Vdc
2	+12 Vdc return
3	+5 Vdc return
4	+5 Vdc

### Device Configuration Jumpers

Two headers on the rear panel of each disk drive inside the drive canister (labeled J01 and J4 in Figure 7) hold jumpers that establish drive operational parameters. Figure 10 shows the position of all jumpers that are installed in J01 and J4. The jumper at position 2 (delay motor start) of J4 is in parallel with a similar connection on the backplane, and is therefore redundant. The jumper at position 3 (enable motor start) of J4 depends on customer requirements and is installed by system checkout engineers before hardware shipment to the site.

Figure 10. Device Configuration Jumpers

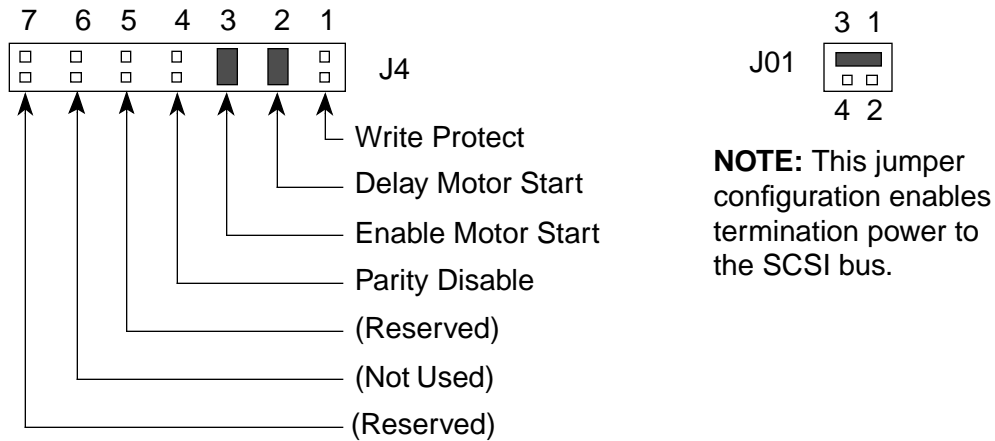

### Device ID Connector

The front-panel device ID switch above each drive connects to the drive ID connector, shown in Figure 7, on the rear panel of the drive inside the drive canister. Table 5 lists the continuity (1) or open (0) condition that exists in the ID switch at each of the six connector positions.

Table 5. Drive ID Connector Pinout

Device ID No.	Continuity (6, 5, 4, 3, 2, 1)
0	0 0 0 0 0 0
1	0 0 0 0 0 1
2	0 0 0 0 1 0
3	0 0 0 0 1 1
4	0 0 0 1 0 0
5	0 0 0 1 0 1
6	0 0 0 1 1 0
7	0 0 0 1 1 1



Table 5. Drive ID Connector Pinout

Device ID No.	Continuity (6, 5, 4, 3, 2, 1)
8	0 0 1 0 0 0
9	0 0 1 0 0 1
10	0 0 1 0 1 0
11	0 0 1 0 1 1
12	0 0 1 1 0 0
13	0 0 1 1 0 1
14	0 0 1 1 1 0
15	0 0 1 1 1 1

## Configuration Guidelines

All drives operate independently. The entire DSS-1 subsystem operates as separate devices connected to independent channels, as shown in [Figure 1](#). Consult the *Scalable I/O Product Configuration Guide*, EMG-1068, for further information about configurations.

## Flaw Management

Each disk drive contains its own SCSI controller, which automatically performs all flaw management. No further media maintenance is either required or possible.

## Installation Reference

---

Refer to *DSS-1/DSS-2 Hardware Upgrade Procedure*, CRI publication HMU-384-0, for procedures for installing the DSS-1 and DSS-2.

## Troubleshooting Reference

---

### Diagnostic Descriptions

Refer to the *Boot Diagnostics and Tests* document, CRI publication HDM-301-0, for descriptions of tests that you can use to boot SIO single-purpose nodes and the multipurpose node.

### Troubleshooting Procedures

Refer to *SIO Troubleshooting Guide*, CRI publication HMM-204-0, which contains troubleshooting procedures for diagnosing faults in the MPN and in the SCSI-2 disk drives attached to it.

Refer to the *CRAY J90 Series System Troubleshooting* document, CRI publication HMM-114-B, for troubleshooting information about diagnosing faults in the SI-3 interface and in the SCSI-2 disk drives attached to it.

## Field Replacement Procedures (FRPs) Reference

---

Refer to *PC-10 Field Replacement Procedures*, CRI publication HMM-236-E, for replacement procedures for the DSS-1 and the DSS-2.